

Table of Contents

1	Introduction	8
2	Installation	9
2.1	Installation Prerequisites	9
2.1.1	On the System Hosting « Intelligent Power® Manager »	9
2.1.2	On the System that Displays Web-based Graphical User Interface	9
2.2	Quick Start & Installation	10
2.3	Installation Result	14
2.4	Uninstalling the Product	14
2.5	Upgrading the Product	14
2.6	Installation / Uninstallation from command line	15
3	Configuration	16
3.1	Configure nodes	16
3.2	Discover nodes connected on the network	16
3.2.1	Quick scan	17
3.2.2	Range scan	17
3.2.3	Addresses scan	17
3.2.4	Default scan settings	18
3.3	Configure node settings	20
3.3.1	Node access parameters	20
3.3.2	Node information	20
3.4	Configure Actions	21
3.4.1	Configure User Accounts	25
3.4.2	System settings	26
4	Supervision	27
4.1	Access to the monitoring interface	27
4.1.1	Local access	27
4.1.2	Remote access	27
4.2	Node List View	28
4.3	Flexible Panels view	30
4.4	Panels list	30
4.4.1	Information	30
4.4.2	Status	31
4.4.3	PDU Outlets Panel	32

4.4.4	Measures	32
4.4.5	Environment.....	33
4.4.6	Graph	33
4.4.7	Synoptic	34
4.4.8	Power Source	36
4.4.9	Powered Applications	36
4.4.10	Events	36
4.4.11	Statistics.....	37
4.4.12	Power Components	37
4.5	Device Supervision	38
4.6	Applications List View	39
4.7	Map View.....	41
4.7.1	Create a customized Map View	41
4.7.2	Maps examples.....	42
4.8	Events	44
4.8.1	List representation	44
4.8.3	Calendar representation	45
4.8.4	Nodes Events list	45
4.9	Launching Device or application Web interface	48
4.10	Defining sub views	49
4.11	Sharing sub views	50
4.12	Node List export to CSV file	51
5	Shutdown	52
5.1	Introduction	52
5.2	Shutdown Configuration	52
5.3	Power Source View	53
5.4	Shutdown Sequence	53
6	Advanced Management	54
6.1	Nodes Settings	54
6.1.1	Single node Configuration Display.....	54
6.1.2	Single Card settings.....	54
6.1.3	Multiple Cards Configurations Synchronization.....	55
6.2	Nodes Upgrade.....	57
6.2.1	Upload Device Firmware	57
6.2.2	Upgrade applications	58
7	Virtualization Module	59
7.1	Introduction	59

7.2	Enabling the Virtualization Module	59
7.3	VMware.....	60
7.3.1	Standalone Hypervisor & Local Solution	60
7.3.1.1	Architecture	60
7.3.2	Multiple Hypervisor & Remote Solution	60
7.3.2.1	Architecture 1	61
7.3.2.2	Architecture 2	61
7.3.2.3	Prerequisites	62
7.3.2.4	Adding Manager or Hypervisor List.....	62
7.3.3	VMware Site Recovery Manager	63
7.3.3.1	Why should I use it??	63
7.3.4	VMware LoadShedding Package	64
7.3.4.1	Why should I use it?	64
7.4	Microsoft Solution.....	65
7.4.1	Standalone Hypervisor & Local Solution	65
7.4.1.1	Architecture	65
7.4.2	Multiple Hypervisor & Remote Solution	65
7.4.2.1	Architecture	66
7.4.2.2	Prerequisites	66
7.4.3	Adding a SCVMM Manager	67
7.5	Citrix	68
7.5.1	Standalone Hypervisor & Local Solution	68
7.5.1.1	Architecture	68
7.5.2	Multiple Hypervisor & Remote Solution	68
7.5.2.1	Architecture 1	69
7.5.2.2	Architecture 2	69
7.5.3	Prerequisites	70
7.5.4	Adding a Citrix XenServer Hypervisor List	70
7.5.5	Adding a XenCenter	70
7.6	Redhat Solution.....	71
7.6.1	Architecture.....	71
7.6.2	Standalone Hypervisor & Local Solution	71
7.7	Xen Open Source Solution.....	72
7.7.1	Architecture.....	72
7.7.2	Standalone Hypervisor & Local Solution	72
7.8	Configuring Hypervisors	73
7.8.1	Introduction	73

7.8.2	Credential configuration for the Hypervisors (ESX/ESXi, XenServer).....	73
7.9	Configuring Maintenance and Shutdown.....	73
7.9.1	Introduction	73
7.9.2	The VMhost has No IPP	74
7.9.3	IPM detects IPP running on the VMHost	75
8	Redundancy.....	77
8.1	Introduction	77
8.2	Redundancy configuration	78
8.3	Redundancy views.....	80
8.3.1	Redundancy view in <i>Node List</i>	80
8.3.2	Composite device in <i>Power source view</i>	80
8.3.3	Power components sub view	81
8.4	Redundancy use case (if shutdown is activated).....	82
8.5	Redundancy advanced behavior example	86
8.6	Redundancy compatibility list	87
9	User Drivers	89
9.1	Introduction	89
9.2	User drivers editor	89
9.2.1	Description	89
9.2.2	New driver.....	90
9.2.3	Delete driver.....	90
9.2.4	Driver details	90
9.3	Rule editor	93
9.3.1	Destination object name	93
9.3.2	Source object name	97
9.3.3	Conversion rule.....	98
9.3.4	Check result	100
10	Storage	101
10.1.1	Discovery	101
10.1.2	Shut down	101
10.2	Automatic data purge	104
11	Compatibility List	105
11.1	Eaton Devices	105
11.2	Applications on Computers	108
11.3	Eaton Serial line Devices.....	108
11.4	Other Devices	109
12	Performances	110

12.1	Network Ports	111
13	FAQ and Error messages	112
14	Glossary	113
15	Acknowledgements	114
16	Appendices	115
16.1	Appendix 1: Configuring the IPM vCenter Plug-in	115
16.1.1	Introduction	115
16.1.2	Checking that IPM Plug-in is registered in vCenter	115
16.1.3	Events and Alarms	115
16.1.4	Using IPM through vCenter	116
16.2	Appendix 2: Configuring the XenCenter Plug-in	116
16.2.1	Prerequisites	116
16.2.2	Check XenCenter Plug-in Installation	116
16.2.3	Using IPM through XenCenter	117
16.3	Appendix 3: Configuring Maintenance mode and vMotion with vCenter	119
16.3.1	Prerequisites	119
16.3.2	Introduction	119
16.3.3	Concept of Maintenance Mode	119
16.3.4	Configuring maintenance mode behavior in vCenter	120
16.3.5	Configuration Test	120
16.4	Appendix 4: VMware vCenter HA (High Availability)	120
16.5	Appendix 5: Configuring Maintenance mode and LiveMigration with SCVMM	122
16.5.1	Maintenance Mode	122
16.5.2	What is Live Migration	123
16.5.3	Configuration Test	123
16.6	Appendix 6 VMware references	123
16.6.1	Eaton and Virtualization	123
16.6.2	VMware ESX configuration	123
16.6.3	vCenter Server (VMware Supervisor)	123
16.6.4	vSphere SDK for Perl	124
16.7	Appendix 7 Microsoft Hyper-V references	125
16.7.1	Eaton and Virtualization	125
16.7.2	Microsoft TechNet Library	125
16.7.3	About Maintenance Mode	125
16.7.4	Requirements for using live migration	125
16.8	Appendix IPP user guide	125
16.9	VMware Icons and Diagrams	125

1 Introduction

Intelligent Power® Manager is Eaton's power device supervision tool for IT environments.

Intelligent Power® Manager:

- Discovers and **supervises Eaton UPSs and ePDUs** connected to the network (either by means of a card or a proxy). For the detailed list of compatible solutions, please refer to the paragraph (Equipment Compatibility List) hereafter.
- **Supervises the remote servers** hosting the Intelligent Power Protector or Network Shutdown Module V3 application.
- Provides **advanced management feature** (mass configuration / mass upload/ ...) with Network Management cards: Network-MS (ex 66102 / 103006826) and Modbus-MS (ex 66103)
- Provides **local computer graceful shutdown** (acquisition through Network or local connectivity, like USB, RS232 port)

2 Installation

2.1 Installation Prerequisites

2.1.1 On the System Hosting « Intelligent Power® Manager »

Please refer to the EatonCompatibilities files:

http://pqsoftware.eaton.com/install/common/eaton_os_compatibility_aa.pdf

Notes:

For better performance with multiple nodes, we recommend a Windows server OS (that doesn't have the limitation of 10 simultaneous network connections).

To avoid network access conflicts, we advise you against installing the Power Manager on a machine that also hosts:

- a Network Management System (e.g. HP-Openview, CA Unicenter, ...)
- the Intelligent Power Protector
- the Eaton Enterprise Power Manager
- the Eaton Network Shutdown Module
- the Network Management Proxy

2.1.2 On the System that Displays Web-based Graphical User Interface

The Eaton Intelligent Power® Manager graphical interface can be accessed remotely using a simple Web browser. Access to this interface is secured through SSL connection (default configuration) and is also secured through Login & password.

The Intelligent Power® Manager graphical interface has been tested with:

- Google Chrome
- Mozilla Firefox
- Microsoft Internet Explorer 7+ (*)

For optimal performance, Google Chrome or Firefox is recommended.

(*) IE6 should work, however, performance is limited

For good performance Internet Explorer 9 or any later version are recommended.

2.2 Quick Start & Installation


To start in 5 minutes, please perform the following steps:

Step 1 (Installation)

On a Windows machine, run the “Intelligent Power® Manager” package under an administrator account.



A Web browser is automatically displayed (enter **admin** as Login / **admin** as Password and click on the **Login** button)

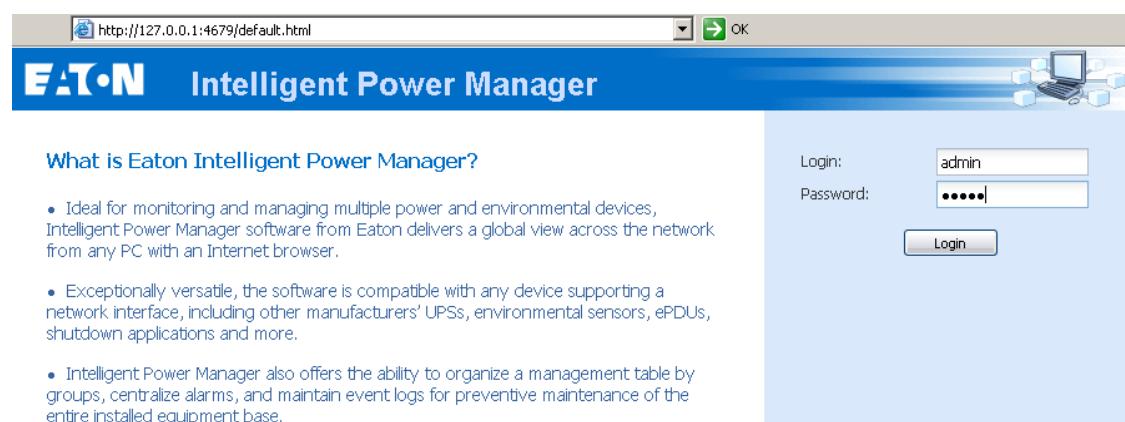

What is Eaton Intelligent Power Manager?

- Ideal for monitoring and managing multiple power and environmental devices, Intelligent Power Manager software from Eaton delivers a global view across the network from any PC with an Internet browser.
- Exceptionally versatile, the software is compatible with any device supporting a network interface, including other manufacturers' UPSs, environmental sensors, ePDUs, shutdown applications and more.
- Intelligent Power Manager also offers the ability to organize a management table by groups, centralize alarms, and maintain event logs for preventive maintenance of the entire installed equipment base.

Step 2 (Configuration)

When started, the application automatically performs a **Quick scan**.

- Using the Quick scan operation, you will discover through broadcast within a few seconds: Network Management Cards Network-MS (ex 66102 / 103006826) and Modbus-MS (ex 66103), PXGX2000, PXGX-UPS, ConnectUPS BD, ConnectUPS X, ConnectUPS MS, Intelligent Power Protector, Network Shutdown Module V3, new Eaton ePDU, new HP UPS Card, new Dell UPS Card, new IBM UPS Card.

The discovered nodes are displayed in **Settings ▶ Auto Discovery**

Some nodes might not be discovered by quick scan if they do not support that function or if they are not in the same subnet as IPM. To discover such nodes, please perform the discovery based on IP address ranges (**Range scan**)

- Using the Range Scan operation you will discover the nodes that are outside of the Network segment and nodes that are not compatible with the "Quick scan" feature.

Refer to the [Compatibility list](#) to determine if your node supports "Quick scan" feature.

Type	Status	Name	Description	Location	Contact	Link
Computer	OK	GREFRVHP6009052.mshome.net	Windows NT/6.01.01			
Computer	OK	GREFRVHP6009815	Windows NT/6.01.01			
Computer	OK	GREFRVHP6009059	Windows NT/5.01.03			
Computer	OK	Eaton ePDU AM 1P...				
Computer	OK	Evolution 650	Bureau Eric			
Computer	OK	Evolution 650	1A09			
Computer	OK	Eaton SPX 1500	Computer Room			
Computer	OK	Eaton SPX 2200	E lab			
Computer	OK	Evolution 650	Computer Room			
Computer	OK	NetApp Release 8...	MTB-LABC0M01			
Computer	OK	Hardware: Intel® E...	Montbonnot			
Computer	OK	Linux nas-netgear...	Unknown			
Computer	OK	BUFFALO TeraStat...	Unknown			
Computer	OK	Linux RS812Sync...	Labo Comm			
Computer	OK	Eaton ePDU AM 1P...				

(Optional) In **Settings ▶ System ▶ Module Settings**, activate the shutdown module, then in the **Settings ▶ Shutdown** page; assign the IP address of the UPS that powers the local Computer.

In the **Settings ▶ User List** page, assign the access rights through "login and password"

Step 3 (Enter the License code)

IPM monitors up to 10 devices ("UPS Web Card", "ePDU" or "IPP Shutdown Controller") without a license key. If there are more devices to be monitored an appropriate license is needed. License can be upgraded also later without reinstallation.

(Only for the "Silver" or "Gold" paid versions) In the **Settings ▶ System ▶ Edit** system Information, enter the license product key that is printed on the commercial CDs booklet (Inside the CD case):
=> ref 66925 Intelligent Power® Manager Silver License (11 to 100 device nodes)

=> ref 66926 Intelligent Power® Manager Gold License (101 to Unlimited devices nodes)

The nodes that are not managed due to license limitation will appear with this icon  .

Step 4 (Operation)

The **Views ▶ Node List** menu item allows you to supervise the current state of the compatible power devices & applications (select a line in the list and the panels are updated with selected device information)

The **Views ▶ Power Source** menu item allows you to supervise the current state of the UPS that powers the server running Intelligent Power® Manager. This menu is available when the user has enabled the shutdown module in **System Settings**.

The **Events ▶ Event List** view allows you to view the device events.

The **Management** section allows you to “mass configure” and “mass upgrade” cards.

2.3 Installation Result

- At the end of the installation, the following shortcuts are created in the group:
Start ▶ Programs ▶ Eaton ▶ Intelligent Power Manager

Name	Description
Open Eaton Intelligent Power Manager	Starts the main "Intelligent Power® Manager" graphical interface
Start Eaton Intelligent Power Manager	Starts the service
Stop Eaton Intelligent Power Manager	Stops the service
Uninstall Eaton Intelligent Power Manager	Uninstalls the Program

- A service called « Eaton intelligent Power Manager » is also created for the Database Acquisition Engine.
This program continuously polls the status of Eaton devices and Applications connected on the network.
This service automatically starts on machine boot-up.
This service provides the Web Interface.
- A System Tray Icon displays the alarms on the local computer. A right click on this icon displays the same shortcuts as in the Windows Start menu.

2.4 Uninstalling the Product

- From the **Add/Remove** programs item of the control panel, execute the "Eaton Intelligent Power Manager Vx.xx" package.
- You can also uninstall from the shortcuts:
Start ▶ Programs ▶ Eaton ▶ Intelligent Power Manager ▶ Uninstall Eaton Intelligent Power Manager.
This will remove the database and the custom files if you confirm it.

2.5 Upgrading the Product

- If you install a new Intelligent Power® Manager Release without uninstalling the old one you will keep your database and your product information.
- Please refer to the §"3.4.2 System settings" paragraph for automatic upgrade.

2.6 Installation / Uninstallation from command line

It is possible to install or uninstall the product from a command line in order to deploy the software massively and/or without graphical interface.

This method also provides the ability to configure protection settings from the command line.

Detail of available command options can be obtained using command:

```
<packageName> -help
```

```
<packageName> [COMMAND] [OPTION] ...
```

Available commands:

- install Launches the installation/upgrade process (default).
- uninstall Launches the uninstallation process.

Available options:

- debug Displays debugging information on the console.
- silent Install the application silently.

Installation folder can be provided with:

```
-dir <installPath>
```

Example:

```
<packageName> -install -silent -dir "C:\Program Files\MyFolder"
```

will install IPM silently in `C:\Program Files\MyFolder`

Once the installation is completed, open a Web browser with the following URL `http://<host>:4679/`
`<host>` is the host name or IP address of the machine hosting IPM

3 Configuration

Start the "Intelligent Power® Manager" main graphical interface from the previously created shortcut, and then click on the **Settings** menu item.

3.1 Configure nodes



Each node (Network Management Card / Proxy / Application must have a valid IP address (or a DNS name) in the range that you have entered for auto-discovery.

Refer to the compatibility list.



"Intelligent Power® Manager" automatically receives the alarms (through notification or polling) without specific configuration on the card, proxies or applications.

For SNMP communication, configure the SNMP parameters from the **System ▶ Scan Settings**.

3.2 Discover nodes connected on the network

From the **Settings ▶ Auto Discovery** item; the following discovery methods are available:

- Quick Scan (automatically performed when application starts)
- Range Scan
- Address Scan

Type	Status	Name	Description	Serial n...	Class	Location	Access
■	■	Eaton ePDU MA 1P IN:IEC309...	Eaton ePDU MA 1P IN:IEC309...	U050B5...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049B5...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049B4...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049C2...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049B5...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049C2...	PDU Network...	MBT La...	A...
■	■	Eaton ePDU MA 1P IN:C20 16...	Eaton ePDU MA 1P IN:C20 16...	U049B5...	PDU Network...	MBT La...	A...
■	■	Eaton 9PX 8000I	Eaton 9PX 8000I	G208C3...	Network Manager	MBT La...	A...
■	■	Eaton 5PX 3000	Eaton 5PX 3000	G096B1...	Network Manager	MBT La...	A...
■	■	Eaton 5PX 3000	Eaton 5PX 3000	G096C3...	Network Manager	MBT La...	A...
■	■	Eaton 5PX 3000	Eaton 5PX 3000	G096C3...	Network Manager	MBT La...	A...
■	■	Linux nas-netgear2100 2.6.3...	NAS Netgear...	Unknown	root		
■	■	Hardware: Intel® Family 6 M...	NAS HP / SNMP	Montbo...	A...		
■	■	NetApp Release 8.0.2.7-Mode...	UFO NetApp ...	MTB-LA...	a...		
■	■	BUFFALO TeraStation TS540...	NAS Buffalo ...	Unknown	n...		
■	■	DELL6609	INOK53...	PDU Dell / SN...	Labo Kalif	U...	
■	■	Cisco IOS Software, C3750E ...	Cisco				

Page 1 of 1 | 100 Items per page | Displaying 1 - 39 of 39

OK: 21 | Warning: 3 | Critical: 1 | Unknown: 13 | Last event: 21/02/2013 - 09:00:50 - Communication with device has failed

3.2.1 Quick scan

The Quick scan request is a Broadcast frame on 4679 IANA reserved port and 69 standard TFTP port. Using the Quick scan operation, you will discover through broadcast within a few seconds:


- Network Management Cards Network-MS (ex 66102 / 103006826) and Modbus-MS (ex 66103),
- PXGX2000, PXGX-UPS, ConnectUPS BD, ConnectUPS X, ConnectUPS MS,
- ePDUs exAM, exMA, exSW, range (x has to be replaced by A for EU models, and 0 for US models)
- Intelligent Power Protector or Network Shutdown Module V3.

3.2.2 Range scan

Using the Range Scan operation you will discover the nodes that are outside of the Network segment and nodes that are not compatible with the "Quick scan" feature.

Refer to the Compatibility list to determine if your node supports "Quick scan" feature.

Activating "Range scan" action will show the "Range scan" dialog box which allow to edit IP address ranges and eventually specify authentication parameters different from global scan settings.

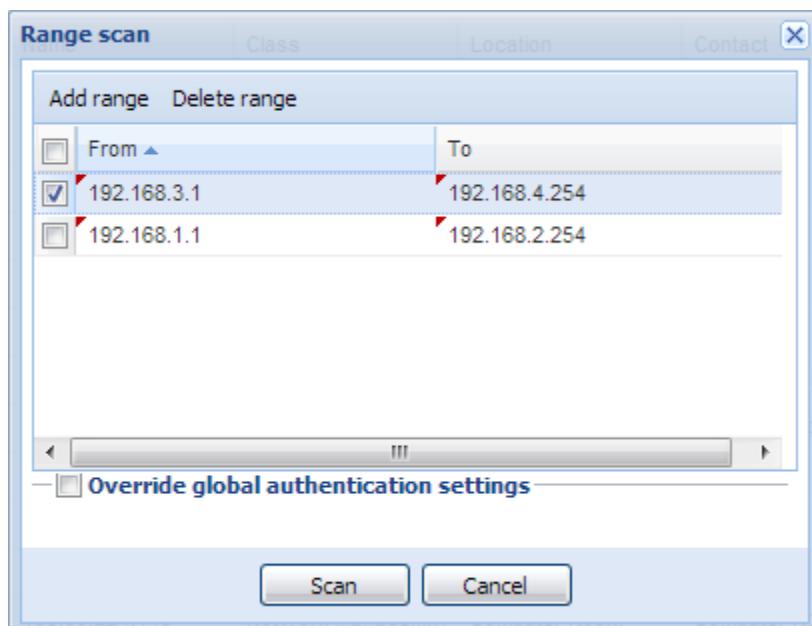


Administrators can add, modify or delete IP address ranges at their convenience. Only selected ranges are effectively scanned.

Checking "Override global authentication settings" will display a panel similar to the global authentication settings dialog, with global parameters. Administrators can modify many authentication settings (activate or deactivate protocols, modify passwords or logins ...). These new settings will be used for this scanner instead of global settings. Like global settings, overridden settings will be used for newly discovered nodes.

3.2.3 Addresses scan

Address Scan performs a single address scan (or several IP addresses separated by semi-colon ";" character).

Activating "Address(s) scan" action will show the "Address(s) scan" dialog box which allows editing IP addresses to scan and eventually specify authentication parameters different from global scan settings.

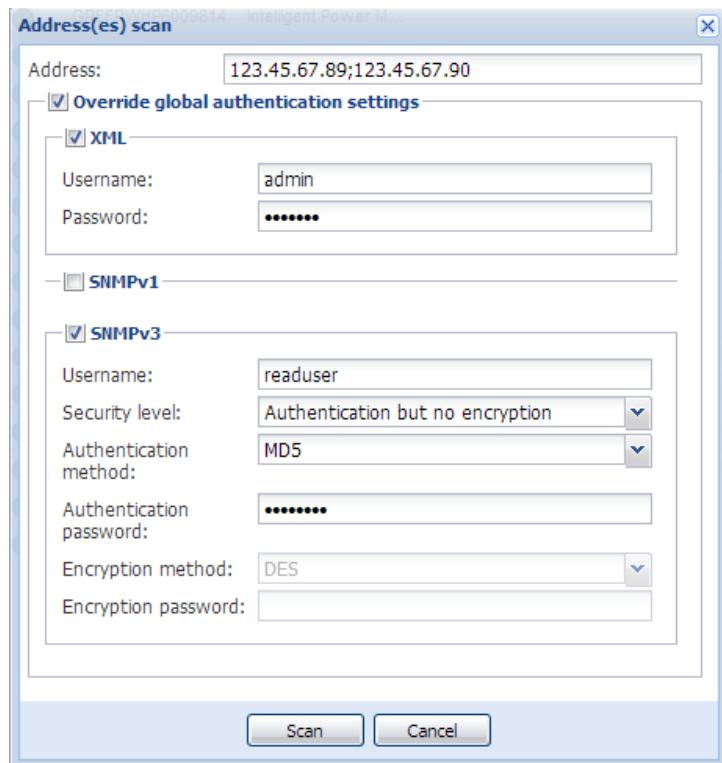

3.2.4 Default scan settings

Administrator can set authentication parameters which will be used by default to discover new devices.

You can specify settings for 4 protocols: XML, SNMPv1, SNMPv3 and NUT. Depending on device supported protocols, IPM will choose needed parameters. See [Compatibility List](#) for protocol supports

Default scan settings are displayed in the “Scan settings” section of “Settings/system” page.



In this dialog box, the administrator can:

- Activate the automatic scanner which will add any devices which is automatically discovered (i.e. without a direct scan action of the administrator, like the presence of a new auto-discovered card on the network).
- Activate protocols used by scanner by toggling protocol checkboxes.
- Set default scanner authentication settings for each protocol.

When discovered, manually or automatically, newly discovered devices will use these authentication parameters.

3.3 Configure node settings


Administrator can configure node information and access parameter by selecting nodes in the “Settings/Auto discovery” page then activating “Edit node information” or “Set node access parameters” actions.

3.3.1 Node access parameters



The “Access parameters” dialog box is displayed and let administrator edit authentication settings. Settings are set to all selected devices. Only relevant settings are set depending on selected device capabilities.

3.3.2 Node information

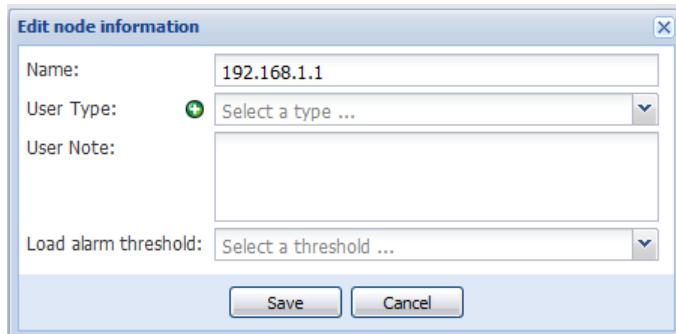


The “Edit node information” dialog box allows editing the node name, the user type, the node description and the associated load alarm threshold.

3.4 Configure Actions

You can define the way users will be notified when node events happen.

From the **Settings ▶ Actions** item; the following channels are available:

- E-mail
- Execute script/program
- Notification to Alarm Box available through System Tray Icon

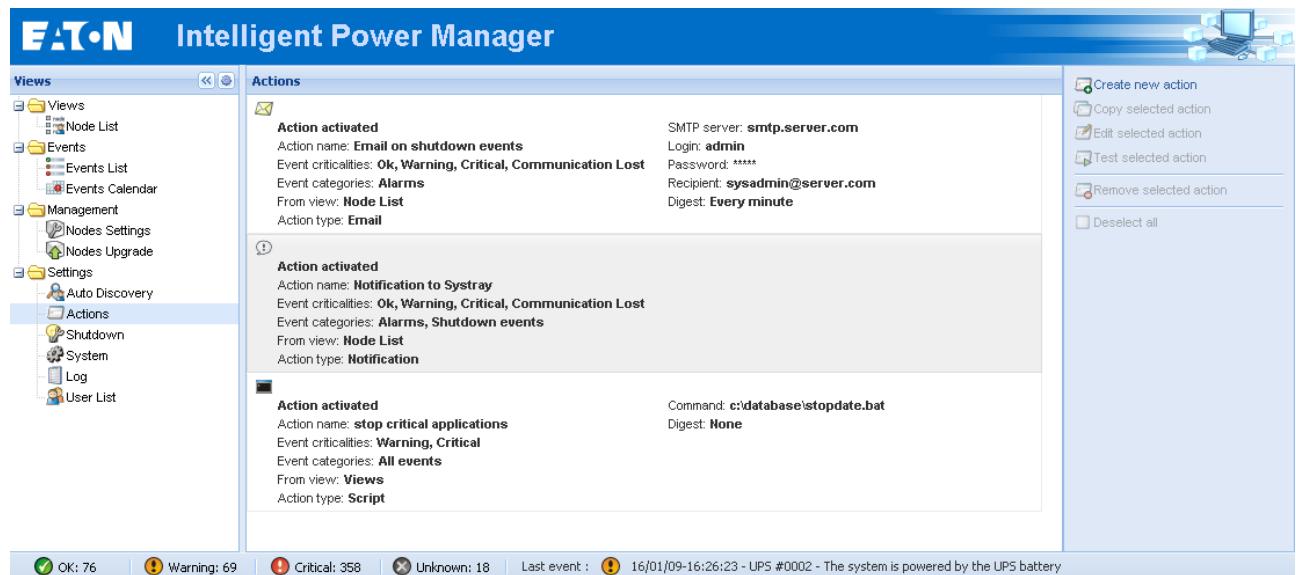

EATON Intelligent Power Manager

Actions

Action	Details
Action activated Action name: Email on shutdown events Event criticalities: Ok, Warning, Critical, Communication Lost Event categories: Alarms From view: Node List Action type: Email	SMTP server: smtp.server.com Login: admin Password: ***** Recipient: sysadmin@server.com Digest: Every minute
Action activated Action name: Notification to Systray Event criticalities: Ok, Warning, Critical, Communication Lost Event categories: Alarms, Shutdown events From view: Node List Action type: Notification	
Action activated Action name: stop critical applications Event criticalities: Warning, Critical Event categories: All events From view: Views Action type: Script	Command: c:\database\stopdate.bat Digest: None

OK: 76 | Warning: 69 | Critical: 358 | Unknown: 18 | Last event: 16/01/09-16:26:23 - UPS #0002 - The system is powered by the UPS battery

Notifications summary window

The **Create new action button** will display following interface:

The screenshot shows the 'Edit action' dialog box. At the top, there are fields for 'Action activated*' (checked), 'Action name*' (Email on shutdown events), 'Event criticalities*' (with checkboxes for Critical, Warning, Normal, and Communication Lost), 'Event categories*' (Shutdown events), 'From view*' (Node List), and 'Action type*' (Email). Below this is a 'Settings' section with fields for 'SMTP server*' (smtp.server.com), 'Login' (admin), 'Password' (*****), 'Recipient*' (sysadmin@server.com), 'Sender' (Intelligent Power Manager), 'Subject' (shutdown alarm from {hostname}), 'Message' (shutdown alarm from {hostname}), and 'Digest*' (Every minute). At the bottom are 'Save' and 'Cancel' buttons.

Note: The “*” fields are required.

Events filter

You can filter the e-mail notification according to:

- The event criticality. (Critical, Warning, Normal, Communication Lost).
- The event category (All Events, Alarms, Shutdown events, Power events, Measures). The pen icon allows editing and selecting the event category.
- The view that triggers the event.

Note on Event Criticality parameter:

With this parameter, you can filter the notification according to the event level. Refer to the event list provided below in this document. If you select “Critical” as filter you will not receive the associated “Normal” event informing that the device status changes from “Critical” to “Normal”.

E-mail

To receive emails on UPS events:

- You have to indicate the **SMTP server address** and **recipient e-mail address**. Login and password are used when SMTP server requests authentication.

For advanced use:

- You can **Customize the subject** e.g. if you use a third party service provider to translate e-mails into SMS.

- You can specify that you want to receive a consolidation of the alarms that occurred during a delay that you can choose (if you specify **no delay**, each alarm will generate an e-mail. With this settings you will receive more emails for the same number of events)

Execute script/program

In order to execute a program on UPS events, the program path will be required.

Note: The program is executed under the SYSTEM account.

- If an action (script or program) cannot be executed under SYSTEM account, it is necessary to modify the execution context before it can be run.

To allow a user to run specific tools and programs with permissions that are different from those assigned to the user's account use the Windows "RunAs" Command which allows you to save the password (Windows XP Service Pack 2 and more recent versions).

Use the following Microsoft command:


```
runas /profile /user:<my login> /savecred <my_program.exe>
```

On first execution a password is required; it is saved for subsequent executions.

Alarm box notification


The alarms are displayed on the local computer in an alarm box.

The status part of the alarm box is optional (It only appears if a Power Source has been declared in the Shutdown configuration)

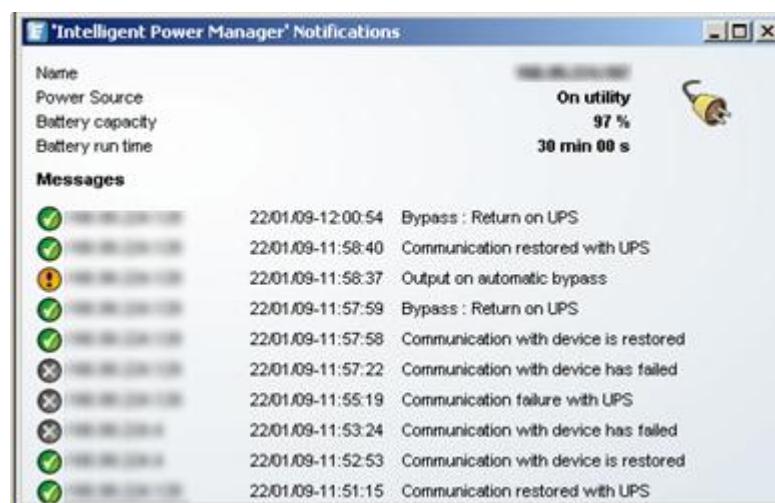

The alarm notification box is accessible from the System Tray icon. Click on the icon to open the window that displays the alarms on the local computer.

A right click on the System Tray icon provides you a fast access to following functions:

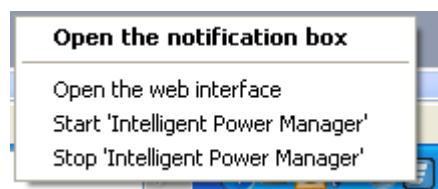

If no Power source has been declared, the System Tray icon can have following states:

 (blue)	System Tray Icon correctly receives alarms from Intelligent Power® Manager
 (grey)	Communication is lost between System Tray and Intelligent Power® Manager

If a Power source has been declared, the System Tray icon can have following states:

	System Tray Icon correctly receives alarms from Intelligent Power® Manager (AC is present on the Power source)
	System Tray Icon correctly receives alarms from Intelligent Power® Manager (The Power Source runs in battery mode)
	System Tray Icon correctly receives alarms from Intelligent Power® Manager (A Warning event occurred on Power Source)
	System Tray Icon correctly receives alarms from Intelligent Power® Manager (A critical event occurred on Power Source)
	Communication with Power source has failed

Advanced events and actions customization:

In Intelligent Power® Manager installation folder, you can see a *configs/scripts* folder containing a sample user-defined action script (*sample_user_script.js*).

You have the possibility to modify this script or create new scripts that define very specific events and actions. The sample script provides details about the expected structure and syntax for defining new actions and triggers.

Advanced sound alarm customization

To configure sound alarms on events, please configure IPM like this:

Step 1)

In C:\Program Files\Eaton\IntelligentPowerManager\configs\config.js

Change the following configuration:

```
'systray':  
{  
  'soundAlarm': false,  
  'notificationIcon': true,  
  'notificationBox': true  
}
```

into this one:

```
'systray':  
{  
  'soundAlarm': true,  
  'notificationIcon': true,  
  'notificationBox': true  
}
```

Step 2)

Close and restart the Windows user session so that this configuration is taken into account

Note:

You can change the alarm sound by setting the Windows sound preferences from Control Panel.


The IPM alarms are linked to the "Low Battery Alarm" sound that you can change by selecting another wav file.

3.4.1 Configure User Accounts

Multiple user accounts can be configured.

From the **Settings** menu item, select the **User List** item, then perform the following steps:

- Click on Add user.
- Enter the User Login and the User password.
- Select the **User's Profile** level. The following levels are available:
 - admin (the user will be able to access all the features)
 - user (the user will only access the visualization and is not able to set changes to the system or nodes).
- Click on **Create new user** button.

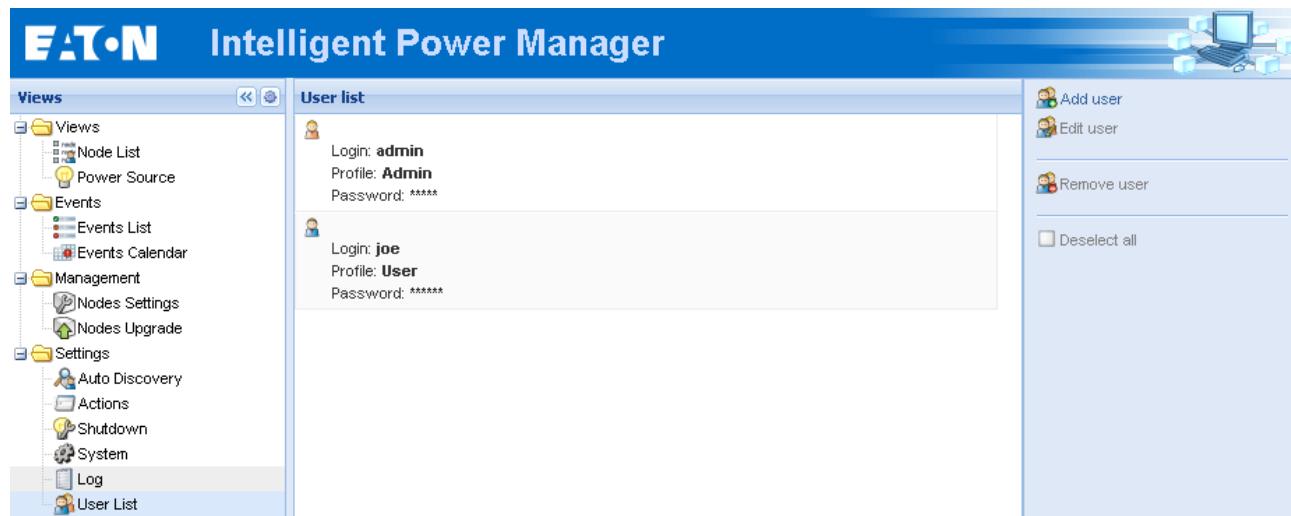

User Accounts window

Intelligent Power® Manager contains a default Administrator profile with

- admin as login
- admin as password

It is strongly recommended to change these settings immediately after installation.

3.4.2 System settings

System settings

Select one of the items, and then click on the corresponding button on the right.

- Edit language allows the user to change the user language. (Czech, English, French, German, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Traditional Chinese are currently supported)
- Edit scan settings allows the user to change protocol access settings and automatic scan at software startup.
- Edit updates & Check updates will provide Automatic Updates Features. This feature gives you access to Eaton software updates. Intelligent Power® Manager will always be up to date if you select the **Check automatically** option. When a new software version is detected on www.eaton.com, just follow the wizard instructions. **Note:** Database information will be retained with this operation.
- Modules settings will Enable / Disable the optional modules Management, Shutdown, Virtualization, User drivers, Redundancy.

4 Supervision

4.1 Access to the monitoring interface

To monitor Eaton devices already discovered on the network, start the main “Intelligent Power® Manager” interface. You can access the same interface locally or remotely.

4.1.1 Local access

- From the system where the supervisor is installed, you can use the following shortcut:
Start ▶ Programs ▶ Eaton ▶ Intelligent Power Manager ▶ Open Eaton Intelligent Power Manager

4.1.2 Remote access

- From a remote machine, you can type the following URL in a Web browser
`https://<name or IP address of computer hosting IPM>:4680/`
or
`http://<name or IP address of computer hosting IPM>:4679/`
- In SSL mode, accept the certificate using the procedure provided by your browser.
- Enter the Login and Password.

4.2 Node List View

Node List

The following default columns are displayed in this page:

- **Type** Graphical Icon to differentiate UPS, ePDU, and software applications
- **Status** This icon represents the severity of the most critical event active on the monitored device;
- **Name** The IP address, the DNS name or user defined name
- **Description** The product name or description
- **Location** The node location
- **Contact** The node contact
- **Link** Link to the device Web site (if available)


Note: You can sort your device list by clicking on the column titles (Status / Name / Description/ Location / Load Level ...).

The following possibilities are available:

- Sort ascending
- Sort Descending
- Add columns (as illustrated on following screenshot)

4.3 Flexible Panels view


- Select one of the device/applications in the list and “detailed Panels” appears in the selection view (on the right).
- Clicking on the bar title allows you to collapse/extend the panel.
- These buttons will allow showing  or hiding  all the views menu or Selection view menu.
- This button  allows selecting which panel you want to add in the Selection view.

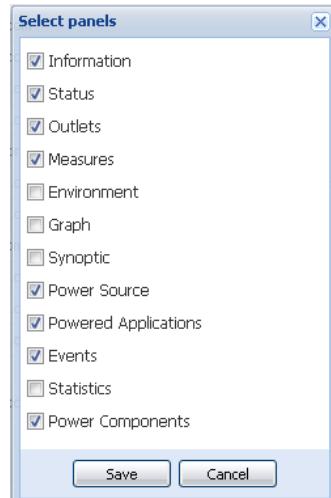

Some of these panels are only available for specific node types.

4.4 Panels list

4.4.1 Information

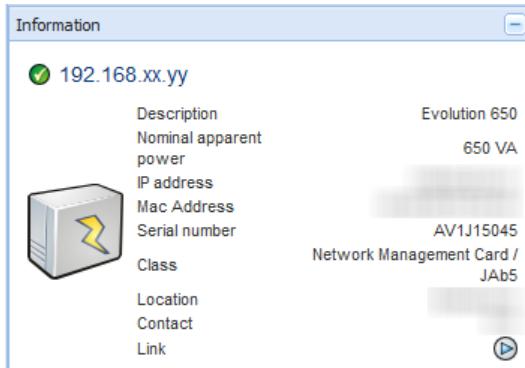

Information Panel


The following node information is displayed in this panel:

- 192.168.xx.yy The DNS name (or IP address) is displayed near the “status icon”
- Description The commercial product name
- Nominal apparent Power The device load capacity in VA
- IP address The device IP address
- Mac address The device MAC address
- Serial Number The device serial number (if available)

- Class The type of the card
- Location The device location (value of syslocation object or can also be configured in the Device page)
- Contact The device contact (value of syscontact object or can also be configured in the Device page)
- Link Link to the device Web site (if available)

Note: The information displayed in this panel depends on the node capabilities.


4.4.2 Status

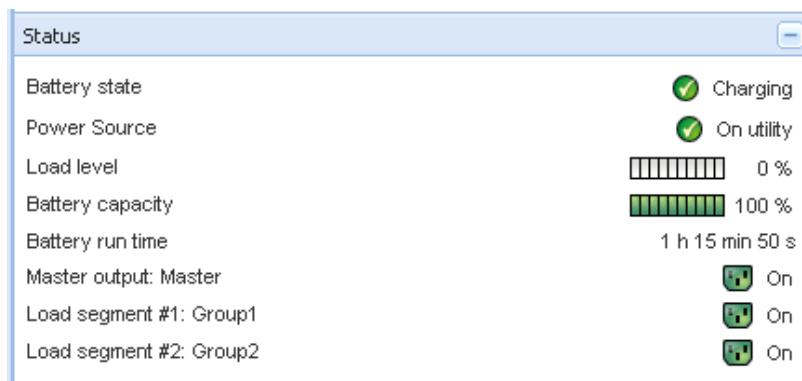

- Power source AC Power / Battery
- Battery state Charging / Discharging / Default / Floating / Resting
- Load Level the output load level of the device
- Battery capacity Battery capacity of the device
- Battery run time the device remaining backup time
- Master Output Main output status (ON/OFF / Internal Failure / On Automatic Bypass / Manual By Pass / Overload)
- Outlet #x Output outlet status (ON/OFF) depends on your UPS model

Note: The information displayed in this panel depends on the node capabilities.

4.4.3 PDU Outlets Panel

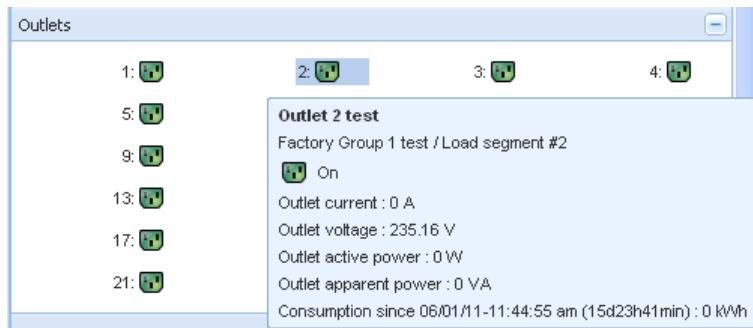

This panel displays outlet status of the selected ePDU.


Notes:

- Contextual information is provided when mouse is over the outlet
- When you select an outlet in this panel, the Graph panel displays the information for this outlet. You also have to select "Outlet" information in the "Graph settings" dialog (accessible through this button  in the "Graph panel")


Outlets color codes

Symbol	Color	Description
	Green	Powered (On)
	Red	Not powered (Off)

4.4.4 Measures

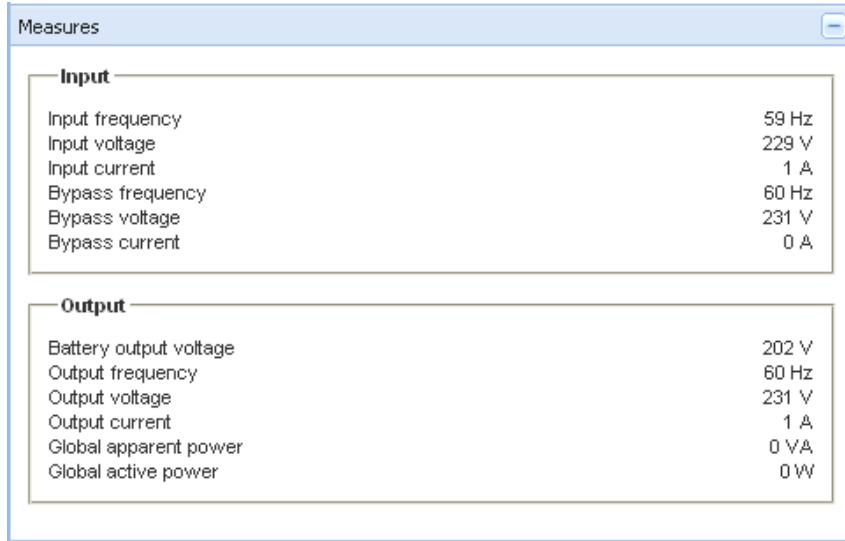


Single Phase UPS Panel

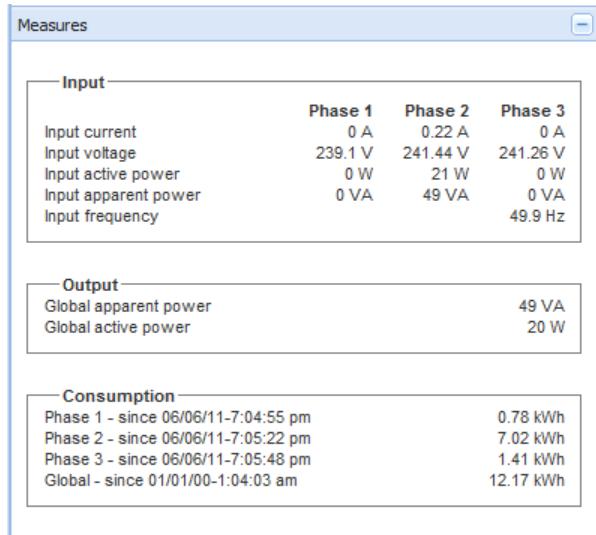

3 Phases ePDU Panel

This panel displays the selected device electrical parameters (UPS or ePDU and single phase or 3 phases) depending on the node capabilities.


4.4.5 Environment

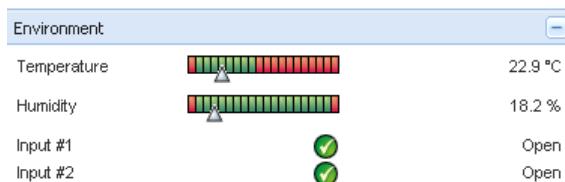

This panel displays the selected device sensor information: Temperature, Humidity level, Dry contact status (Open/Closed)

- Temperature Sensor temperature (in °C, or °F)
- Humidity Humidity level
- Input #1 Status of first contact (open / closed)
- Input #2 Status of second contact (open / closed)

4.4.6 Graph

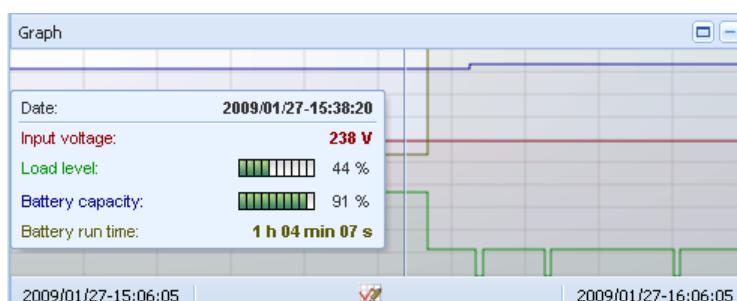


Graph Panel

This panel displays the graph of the main measures of the selected device.

The  button allows you to maximize the graph window for better visibility.

The  button allows you to select the data you want to graph.

4.4.7 Synoptic

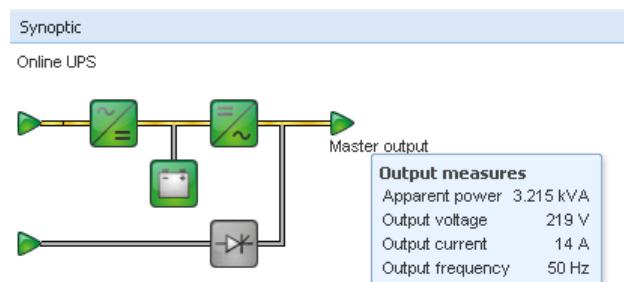

Synoptic Panel

This panel displays the selected device synoptic. A tool tip is displayed when the mouse is over one of the functional block.

Synoptic Color codes:

- UPS modules:

AC/DC	DC/AC	By-Pass	Color	Description
			Green	Status OK & Active
			Red	Internal fault & Inactive
			Grey	Status OK & Inactive or Unknown

- Battery module:

Symbol	Color	Description
	Green	Status OK
	Orange	Battery charge is less than 50%
	Red	Battery fault or End-of-backup or End-of-battery-service-life pre-alarm
	Grey	Battery status unknown

- Electrical flows:

Symbol	Color	Description
	Yellow	Current flow through the cable Note: the object animation gives the direction of current flow
	Grey	No current flow through the cable (Warning: the cable may still have voltage)

- Electrical power source at UPS input:

Symbol	Color	Description
	Green	Source powered. Status OK
	Grey	Source not powered or status unknown

Examples of combinations between flow status and power source status:

	Green/ Yellow	The electrical power source is powered and provides electrical flow
	Green/ Grey	The electrical power source is powered and does not provide electrical flow

- Load at UPS output: (its status is linked to that of the UPS output status)

Symbol	Color	Description
	Green	Load powered and protected. Status OK

	Red	Load not powered
	Grey	Load status unknown

Examples of combinations between flow status and load status:

	Yellow/ Green	Load powered and protected
	Grey/ Red	Load not powered

4.4.8 Power Source

Power Source

Node	Evolution 850
Description	
Location	Bureau
Contact	Seb
Link	
Load segment	Master outlet

Power Source Panel

This panel displays information on the device that powers the selected application running on the server.

4.4.9 Powered Applications

Powered applications

Status	Name	Shutdown diag	Shutdown durs	Outlet group
	166.99.250.10:		2 min 00 s	1

Runtime to shutdown: 22 min 20 s
 Shutdown duration: 2 min 00 s
 Off time: 15 min 15 s

Powered Applications Panel

This panel displays information on the software applications (shutdown agents on the servers) that are powered by the selected device.

4.4.10 Events

Events

Status	Date	Message
	27/01/09-15:59:22	Bypass : Return on UPS
	27/01/09-15:58:45	Output on automatic bypass
	27/01/09-15:58:43	The outlet group 2 is on
	27/01/09-15:58:42	The outlet group 1 is on
	27/01/09-15:58:40	The UPS output is on
	27/01/09-15:58:32	The UPS output is off

Events Panel

This panel displays the events list of the selected node.

4.4.11 Statistics

Statistics - 7 days	
Communication between card and device lost	4
The UPS output is off	4
Network communication with device lost	3
Estimated consumption	27.54 kVA.h
Power lost count	3
Cumulated power lost time	6 min 42 s
UPS fault	3
UPS overload	1
02/17/09 - 12:00:00 am  02/23/09 - 11:59:59 pm	

Statistics Panel

This panel displays the statistics of the selected node.

The  button allows you to select the time interval for the statistics.

You can adjust the time interval by clicking on the 2 buttons with the "From" and "To" dates.

Here is the list of Statistics Computed Data:

- Apparent Consumption (or Active Consumption in next release)
- Average Apparent Power (or Average Active Power in next release)
- Power Failure Count
- Power Failure Cumulated Duration
- Battery Fault Count
- Internal Failure Count
- Overload Count
- Warning Alarm Count
- Critical Alarm Count
- Output Off Count
- Communication Lost Count

Note: This information depends on device capabilities

4.4.12 Power Components

Power Components						
Type	Stat...	Name	Load level	Battery capacity	Battery run ...	
		...	 0 %	 100 %	1 h 15 min 5...	
		...	 6 %	 100 %	40 min 25 s	

Power Components Panel


This panel displays the components of your redundant UPS system if the Redundancy feature is activated. (Refer to the Redundancy chapter)

4.5 Device Supervision

The bar at the bottom is the status of nodes. Clicking on one of the icon will display all the devices in this state.

For example, here:

- 14 nodes OK,
- 4 are in Warning status
- 2 are in Critical status
- 0 are in Unknown status

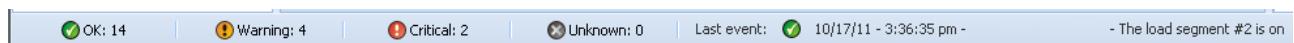

4.6 Applications List View

To create a sub-view that filters applications, right click on **Node List**, then **create a Sub View** from and select **Category** as criteria to filter the nodes. It is possible to create sub views from the following information: “Category”, “Contact”, “Description”, “IP address”, “Location”, Name”, “Status”, “Type”, “User Note”, “User Type”.

Intelligent Power Protector or Network Shutdown Module V3 can be monitored in this View.

Applications List View

The following default information appears in this page:

- Type Application
- Status This icon represents the status criticality of the server
- Name Value configured in the Applications screen (by default this is an IP address or a DNS name).
- Description Machine operating system
- Power source It is the UPS that powers the application
- Estimated Run Time to shutdown Operating time in the event of a utility supply loss
- Shutdown duration Duration, in seconds, needed by the system to carry out its shutdown procedure
- Power Source shutoff After the application is stopped, this information shows whether the power source is stopped or not

- Outlet group UPS load segment
- Link Link to the Web supervision interface of the Intelligent Power Protector or Network Shutdown Module V3 module

4.7 Map View

This graphical representation allows you to organize the supervision Map using the Drag & Drop feature


Select a node icon and the information will be updated on the right hand panel

4.7.1 Create a customized Map View

On the Left hand menu, select **Views ▶ Node Map**

The Map is automatically generated (icons are automatically placed on the Map and IP address assigned)

On the Node Map bar title the contextual tool button  provides you the tools to modify the Map.

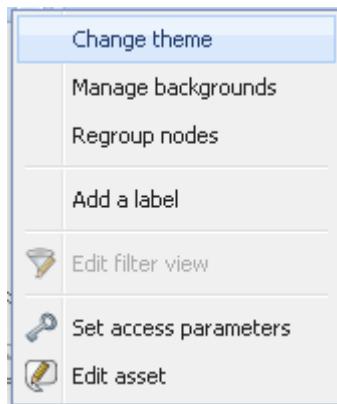

Change theme offers three kinds of icons representations for the user (small icons, large icons, and rack icons).

Manage backgrounds will offer you the possibility to:


- Import a new background image in the supervision tool.
- Select a background already in the supervision tool for the Map.
- Remove the background images.

Regroup nodes will rearrange the icons position on the Map.

Add a label allows to create a user defined text and to place it on the Map through drag and drop.

Note: to delete a label, right click on it, then **Delete**.


4.7.2 Maps examples

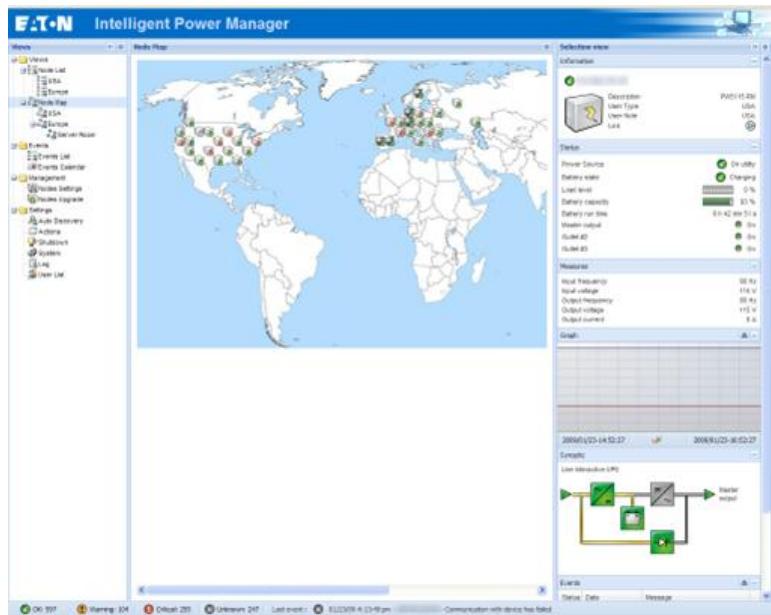

World Map view



Country Map view

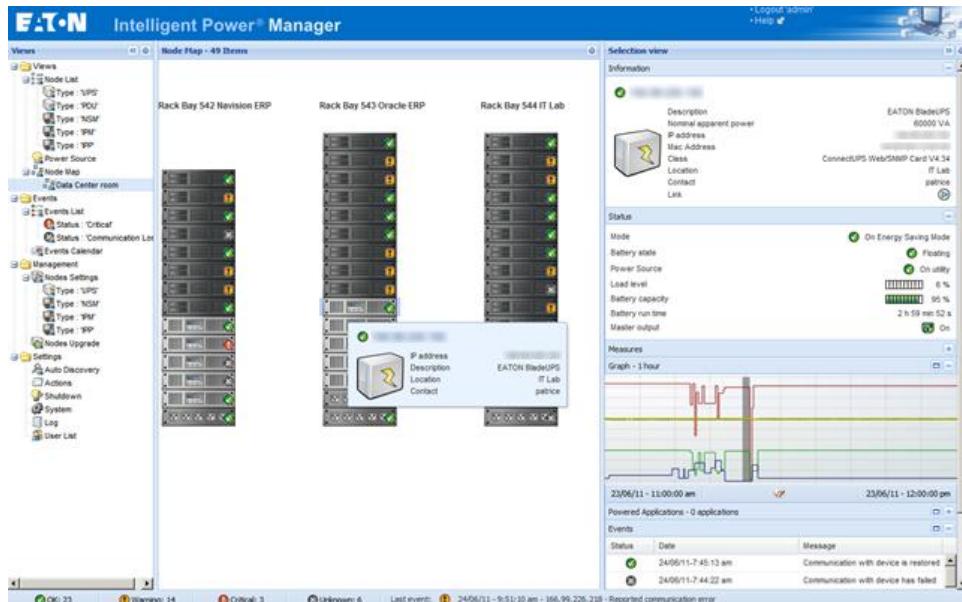

Server Room Map view

4.8 Events

4.8.1 List representation

Select the **Events ▶ Events List** and the following page appears:

Status	Date	Name	Message	Ack
!	08/03/2013-11:08:32		Reported communication error	
!	08/03/2013-11:07:41		Communication with device has failed	
!	08/03/2013-11:07:32		Reported communication restored	
!	08/03/2013-11:05:32		Reported communication error	
!	08/03/2013-10:34:54		Reported communication restored	
!	08/03/2013-10:33:54		Reported communication error	
!	08/03/2013-10:33:53		Communication with device is restored	
!	08/03/2013-10:18:29		Communication with device has failed	
!	08/03/2013-10:17:57		Communication with device has failed	
!	08/03/2013-10:17:46		Communication with device has failed	
!	08/03/2013-10:15:53		Sensor contact 'Input#2' off	
!	08/03/2013-10:15:53		Sensor contact 'Input#1' off	
!	08/03/2013-10:15:53		Communication restored with environment sensor	
!	07/03/2013-15:42:37		Sensor contact 'Input#2' off	
!	07/03/2013-15:42:37		Sensor contact 'Input#1' off	
!	07/03/2013-15:42:37		Communication restored with environment sensor	
!	07/03/2013-15:42:29		Communication failure with environment sensor	
!	07/03/2013-15:42:28		Sensor contact 'Input#2' off	
!	07/03/2013-15:42:28		Sensor contact 'Input#1' off	
!	07/03/2013-15:42:28		Communication restored with environment sensor	
!	07/03/2013-15:42:28		Communication failure with environment sensor	
!	07/03/2013-15:42:28		The load segment #2 is off	
!	07/03/2013-15:42:28		The load segment #1 is off	
!	07/03/2013-15:42:28		The UPS output is off	
!	07/03/2013-15:42:28		Communication failure with environment sensor	

Alarms list.

All new alarms are stored in this log.

You can sort the alarms according to **Status, Date, Name, Message and Ack**.

The following functions are available:

- **Acknowledge selected events** will add a check box in the **Ack** column for selected events
- **Acknowledge all events** will add a check box in the **Ack** column for all events
- **Export Logs** will create a logs.csv file with the following syntax:
 - Date"Node,Type,Level,Object,Value,Message
 - **Note:** Export command may take several seconds before allowing download to create logs file
- **Purge Logs, Delete all logs (specify a date)**

Select all will select all displayed events.

Deselect all will deselect all selected events.

4.8.3 Calendar representation

Select the **Events ▶ Events Calendar** and the following page appears:

In this matrix representation, each line is a week and each column is a day of the week.

If you select a day or an interval (with date picker or shift+click command), events and statistics panels will give you all information for this selection and will automatically refresh when new statistics have been computed.

Status	Date	Name	Message	Ack
●	02/23/09-6:12:1...		Communication with device ha...	
●	02/23/09-5:50:5...		Communication failure with UPS	
●	02/23/09-5:58:5...		The UPS output is off	
●	02/23/09-5:00:5...		Communication with device ha...	
●	02/23/09-4:49:4...		Communication with device is...	
●	02/23/09-4:43:3...		Communication with device ha...	
●	02/23/09-4:34:2...		Communication with device is...	
●	02/23/09-4:27:5...		Communication with device ha...	
●	02/23/09-4:17:2...		Communication with device is...	
●	02/23/09-4:13:5...		Communication with device ha...	
●	02/23/09-4:01:2...		The UPS output is off	
●	02/23/09-4:01:2...		Communication failure with UPS	
●	02/23/09-4:01:2...		Communication with device is...	
●	02/23/09-3:58:2...		Communication with device ha...	
●	02/23/09-3:56:4...		Communication restored with...	

Statistics - 02/23/09

Network communication with device lost	38
Communication between card and device lost	22
The UPS output is off	22
Estimated consumption	57.33 kVA.h
Power lost count	3
Cumulated power lost time	6 min 42 s
UPS fault	3
UPS overload	1

4.8.4 Nodes Events list

The icons in the different views represent the event severity.

Icon	Event status
	Normal. With this event, the device is coming back to a normal status. Event list (UPSs, ePDUs, Applications, Generic devices):

- Communication with device is restored
- Communication restored with UPS
- The system is powered by the utility
- The UPS output is on
- Communication restored with UPS
- Battery OK
- UPS returns to normal load
- UPS OK
- Bypass : Return on UPS

- End of low battery alarm
- The outlet group 1 is on
- The outlet group 2 is on
- Communication failure with environment sensor
- Communication restored with environment sensor
- Humidity is in normal range
- Temperature is in normal range
- Input #x on
- Input #x off
- End of warning alarm
- End of critical alarm
- Redundancy restored
- Protection restored

Event list (ePDUs specific):

- The input frequency is in normal range
- The input temperature is in normal range
- The input voltage is in normal range
- The input {x} is in normal load
- The section {x} current is in normal range
- The section {x} voltage is in normal range
- The outlet group {x} current is in normal range
- The outlet group {x} is in normal load
- The outlet group {x} is on
- The phase {x} output load is in normal range
- The output frequency is in normal range
- The output load is in normal range
- The output voltage is in normal range



Warning. A problem occurred on the device. Your application is still protected.

Event list (UPSs, ePDUs, Applications, Generic devices):

- The system is powered by the UPS battery
- Output on automatic bypass
- Output on manual bypass

- Humidity is below low threshold
- Humidity is above high threshold
- Temperature is below low threshold
- Temperature is above high threshold
- Warning Alarm (a generic Warning alarm is active on the device)
- The device is under its load alarm threshold
- The device is over its load alarm threshold
- Protection lost
- Redundancy lost
- Shutdown in {time}
- Remote Communication Error (remote communication or configuration issue is detected)



Critical. A serious problem occurred on the device. This problem requires an immediate action. Your application might NOT BE powered anymore.

Event list (UPSs, ePDUs, Applications, Generic devices):

- The UPS output is off
- The outlet group 1 is off
- The outlet group 2 is off
- Battery fault
- UPS overload
- UPS fault
- Low battery alarm
- Applications must stop immediately...
- System shutdown in progress...
- Critical alarm (a generic Critical alarm is active on the device)

Event list (ePDUs specific):

- The input frequency is out of range
- The input temperature is above high threshold
- The input temperature is below low threshold
- The input voltage is above high threshold
- The input voltage is below low threshold
- The input {x} is overload
- The section {x} current is too high
- The section {x} current is too low

- The section {x} voltage is too high
- The section {x} voltage is too low
- The outlet group {x} current is too high
- The outlet group {x} current is too low
- The outlet group {x} is overload
- The outlet group {x} is off
- The phase {x} output is overload
- The output frequency is out of range
- The output is overload
- The output voltage is above high threshold
- The output voltage is below low threshold



Communication lost

Event list:

- Communication failure with Device or Application



Device is not managed


Your device is not managed due to license limitation. Please go to **Settings ▶ System** page to enter a Silver or Gold license code.

4.9 Launching Device or application Web interface

From the **Status** panel, you can access the Web Page for Eaton cards or applications including a built-in web server. Click on the web **Link** associated to this blue icon (http access) or this yellow one (https access).

Opening different Web interfaces from Intelligent Power® Manager


4.10 Defining sub views

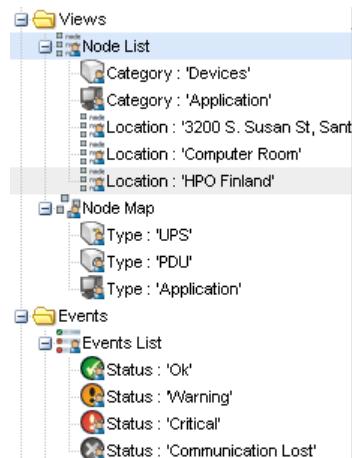

When you have to monitor large configurations, it is helpful to define several sub views and then filter the nodes or events in these categories.


You can select many criteria in order to organize your tree (i.e. geographical, organizational, by status...).

- Select a view in the left menu (e.g. Devices)
- Right click on this view and the following contextual menu appears.

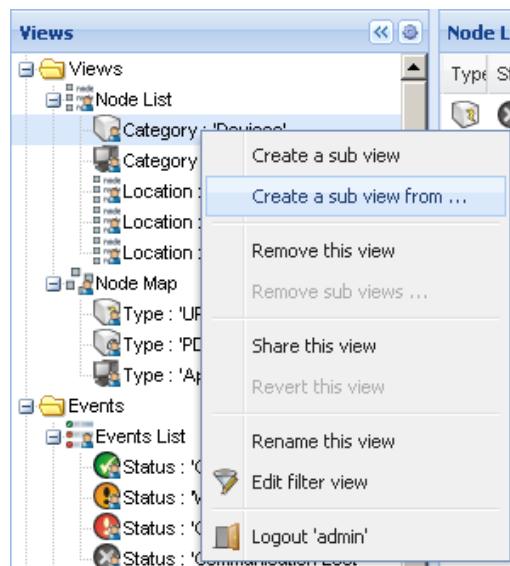

- Click on **Create a sub view from ...** and follow the instructions.

- To filter the nodes in this sub view, right click on a line of the **Node List** area and edit a **Filter View**.

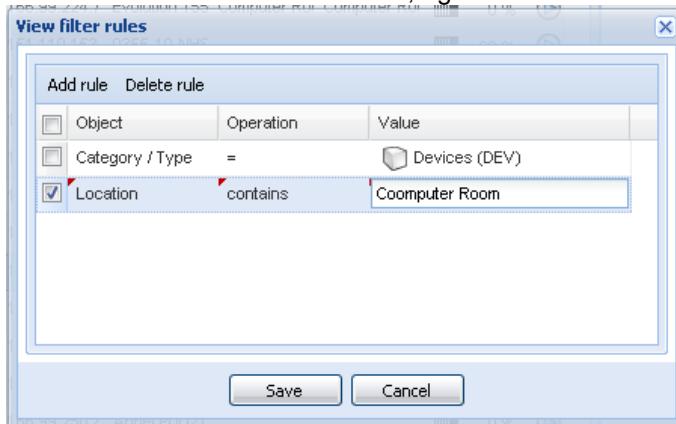




- To add a filtering rule, click on the **Add rule** button then key in the Object, Operation and Values.
- With this filter you will view the **Devices** whose **Location** field contains the value “**Computer Room**”.

4.11 Sharing sub views

A customized sub view is “attached” to the user that created it. It is private (marked with a small man on the icon of the sub view). If the owner of the sub view wants to allow the use of the sub view by the other users, he needs to share the view.

A Right-Click on the view allows you to open the contextual menu:

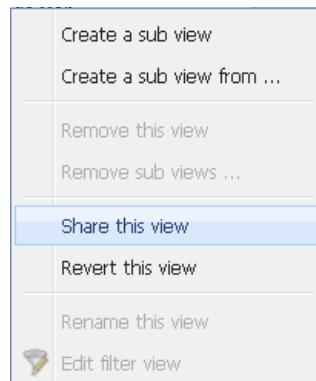

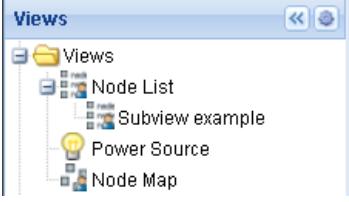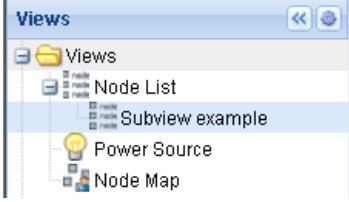
<p>“Subview example” is private (customized and not shared)</p> <p>“Node Map” is customized and not shared.</p>	<p>“Subview example” is public (customized and shared)</p> <p>“Node Map” is customized and not shared.</p>
	

Customizing a view cancels the sharing of this view. For the use of this view by all the users, the owner of the view must share it again.

4.12 Node List export to CSV file

To export data displayed in the Node list, click on the button in the top right corner of the Node list and select Export to CSV file.

If some nodes are selected in the list, the exported file contains only data for the selected nodes. If no node is selected, the exported file contains data for all the nodes in the list. Only data from currently displayed columns are exported.

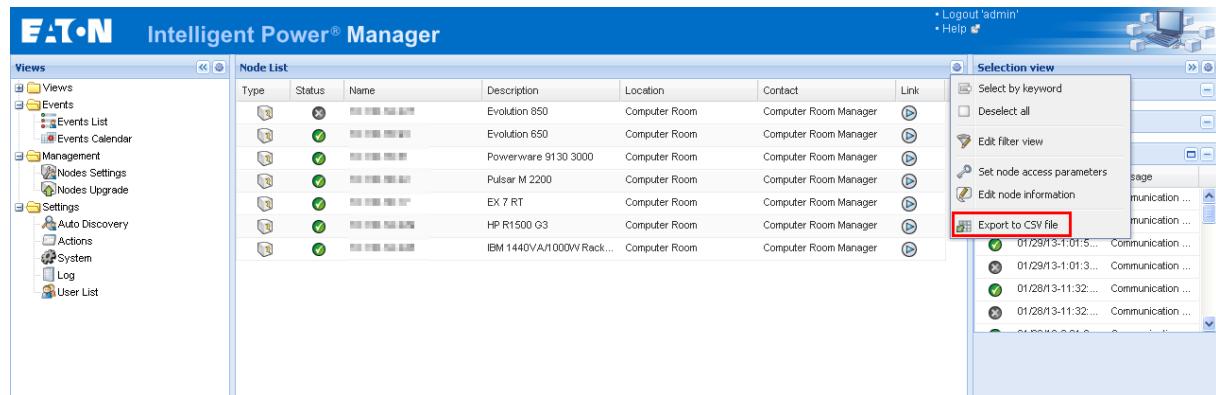

Exporting node list from node list view

The function is also available from **Auto Discovery ▶ Export to CSV file**

5 Shutdown


5.1 Introduction

This Shutdown feature can be Enabled / Disabled from the **Settings ▶ System ▶ Modules Settings**

When the Shutdown feature is enabled, the software displays a communication error until the Power Source is correctly configured (see below).

5.2 Shutdown Configuration

- Login with an administrator user profile
- Check that Shutdown Module is enabled.
- From the **Settings** menu item, select the **Shutdown** item:

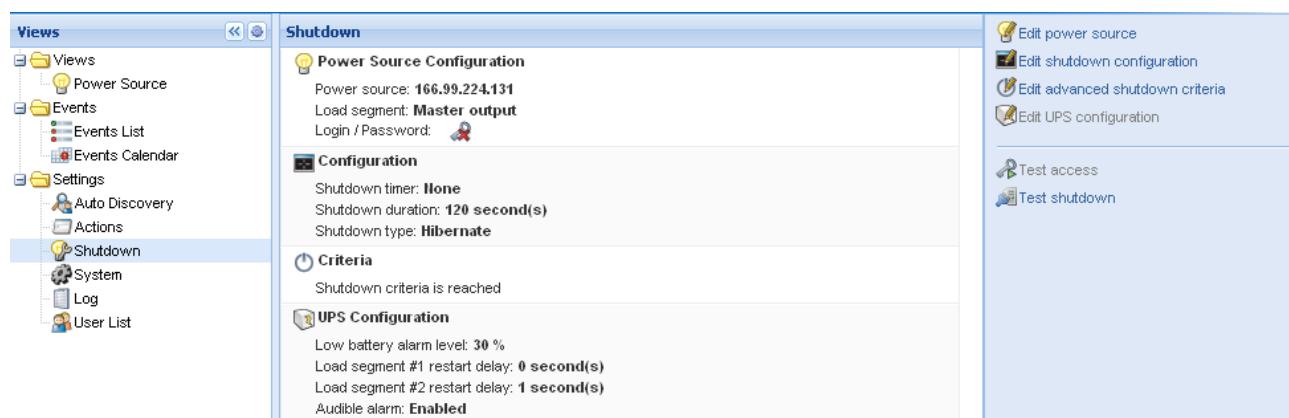

To configure, perform the following actions:

- Click on Edit Power Source.
- In the **Power source** field select the UPS that powers the computer hosting Intelligent Power® Manager.
- Select the UPS Load Segment which is powering the server.
- Fill the login and password if necessary (depends on the connectivity).
- Click on Save.

Notes:

- Please refer to the Intelligent Power Protector User Manual for a detailed description of the shutdown feature.
- Shutdown through Hibernate: If available with your operating system, it is better to use the hibernation feature (available from Windows 2000) as there are a number of advantages. When the computer is shutting down all work in progress and system information are automatically saved to the disk. The computer itself is also de-energized. When mains power returns, all the applications re-open exactly as they were and the user placed back in their work environment... The Hibernate function must first have been activated in the operating system (In the power options on the Windows control panel ▶ Hibernate tab).


Note: If you select hibernate, but your computer does not have this function, Intelligent Power® Manager will still protect the installation by carrying out the normal (default) shutdown.

5.3 Power Source View

When **Shutdown** feature is configured, from the **Views** menu Item, select the **Power Source** item.

You will be able:

- To supervise the information from the UPS that powers the Intelligent Power® Manager computer.
- To personalize the view of the panels by drag and drop.

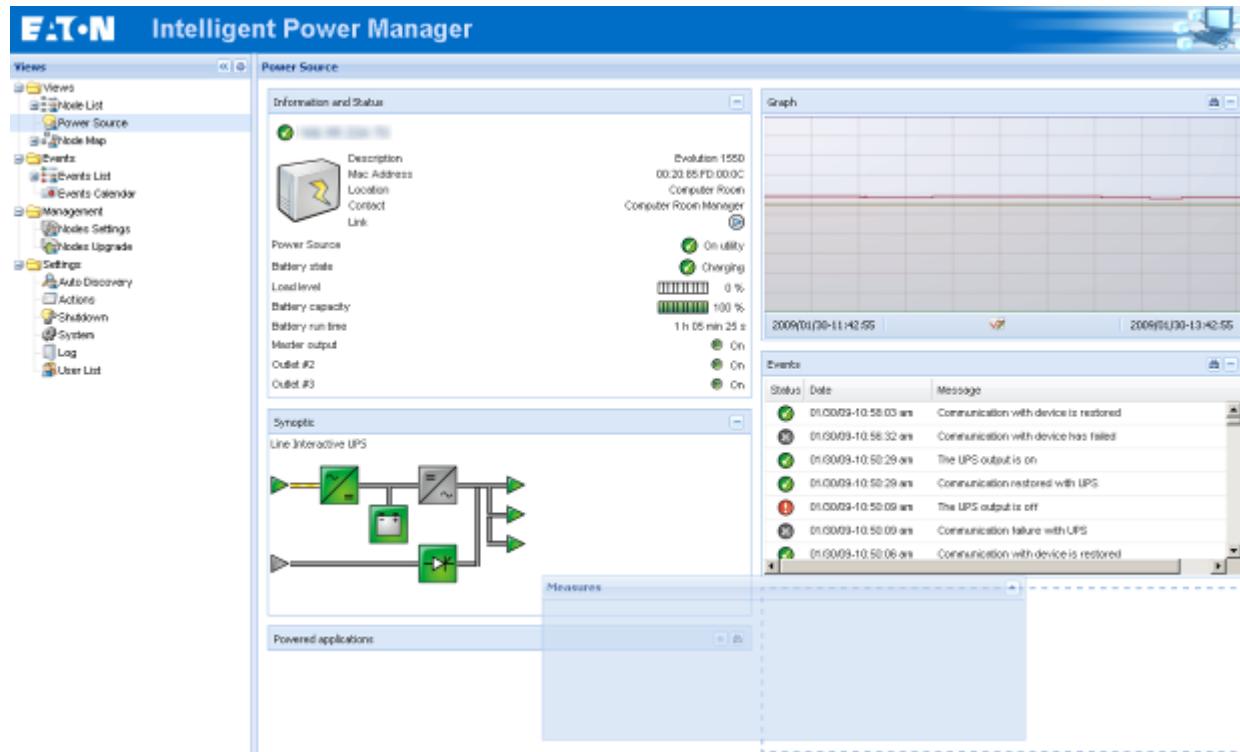

5.4 Shutdown Sequence

For the “Shutdown Sequence” and “Shutdown Use case”, please refer to the Intelligent Power® Protector user’s manual.

IPM can acquire shutdown alarms from IPP with the “Shutdown Controller” enabled.


6 Advanced Management

6.1 Nodes Settings

6.1.1 Single node Configuration Display

Intelligent Power® Manager can display the card/application configuration. Proceed as follows:


- Select one card from the list.
- After a few seconds, on the right hand, the Node configuration panel is updated.
- Use the **Configurations > Export Configuration file** to export this configuration to a file.

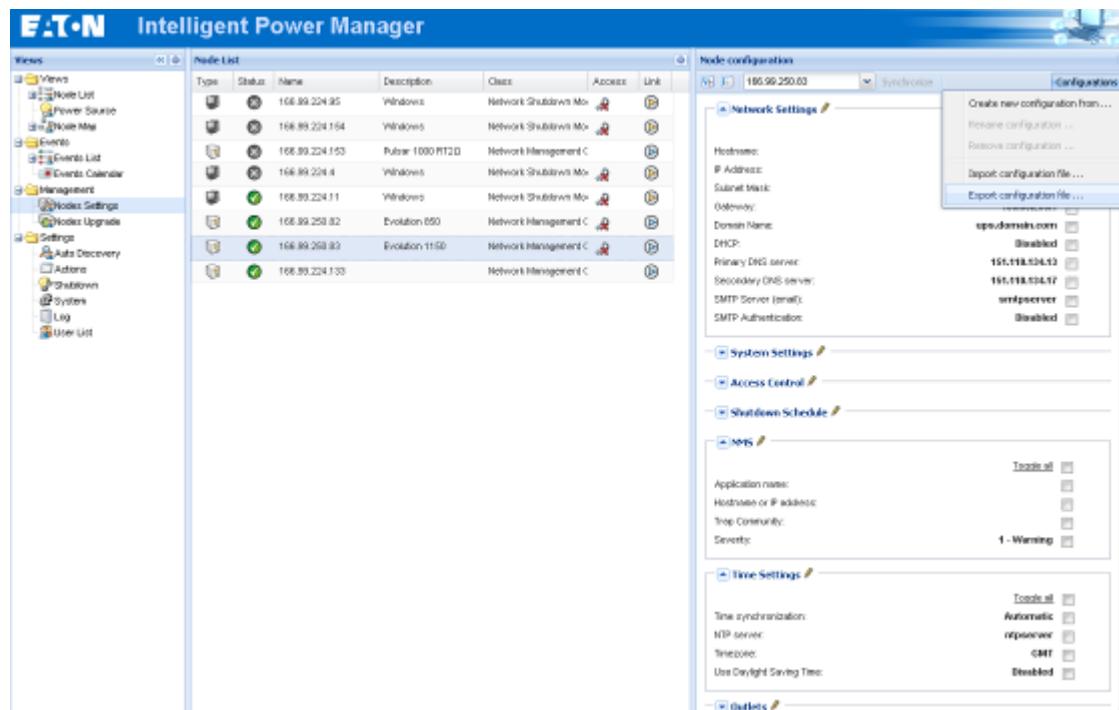

6.1.2 Single Card settings

Intelligent Power® Manager can configure a single card. Proceed as follows:

- Login with an **administrator** profile.
- Select one card from the list.
- From the Node List button **> Set Login Parameters**, enter the card Login and Password. The access status changes from **Access Denied** () to **Access OK** ().
- After a few seconds, the Node configuration panel is updated.
- Click on the Edit button [or load a previously created configuration]. In the Configuration Window check the parameters you want to change and fill in the new values.

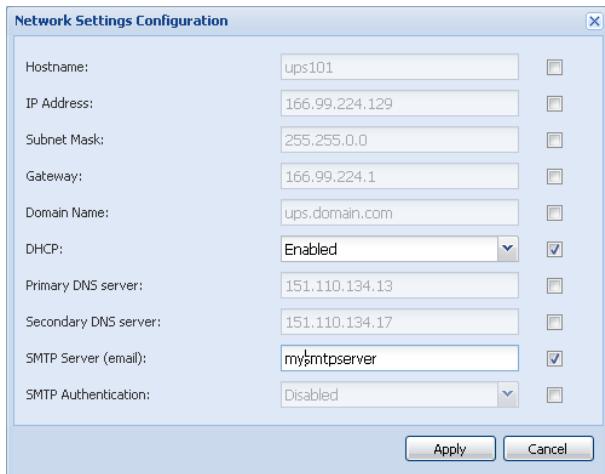


- **Apply** the changes.
- The parameters that have different values on the cards and on the configuration to apply have the following sign “≠”.
- Then select the parameters you want to synchronize (with the check box).
- Then click on **Synchronize** button.

Note:

Some advanced parameters details are not displayed in the IPM **Node configuration** screen. You need to change the advanced parameters details directly on one device and then synchronize the configuration from this device to other devices.

On next screenshot, we provide a typical example with ePDU Power Schedule configuration. The details of Power Schedule1 to Power Schedule 8 are available from the device web interface. Checking all the “Power Schedule X- advanced parameters” will synchronize all the advanced parameters details of the category.

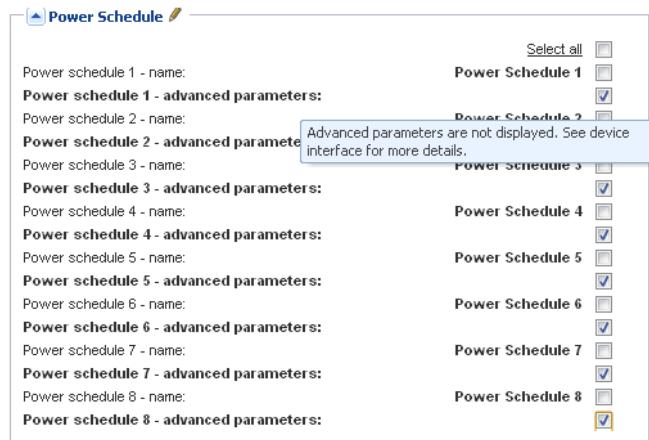


6.1.3 Multiple Cards Configurations Synchronization

Intelligent Power® Manager can synchronize multiple cards configurations. Proceed as follows:

- Select several cards from the list.
- From the Node List button ▶ **Set Login Parameters**, enter the card Login and Password. The access status changes from: **Access Denied** () to **Access OK** ().


- After a few seconds, the **Node configuration** panel is updated.
- From the combo box select the configuration that will be the model [or Click on the Edit button ].
- The parameters that have different values on the cards have following sign “”.
- Select the parameters you want to synchronize (with the check box).
- Click on **Synchronize** button.

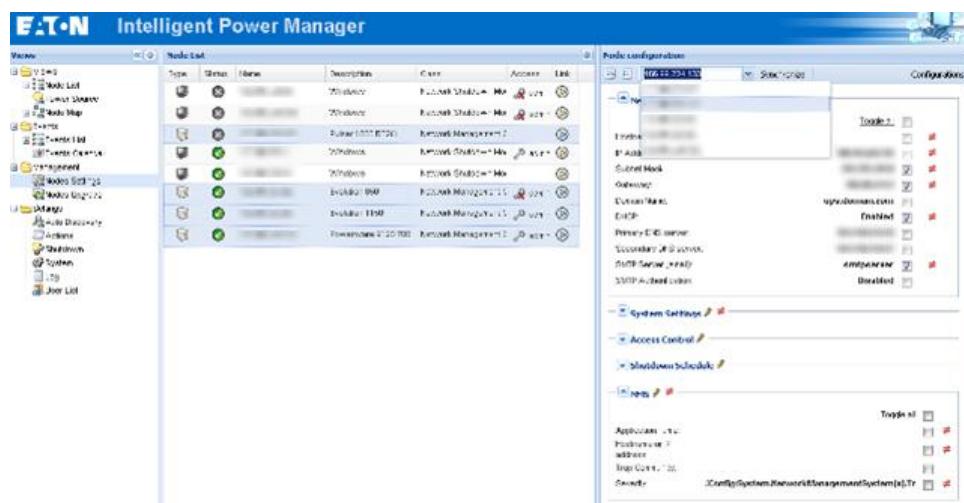

6.2 Nodes Upgrade

6.2.1 Upload Device Firmware

From the **Management** menu item, select the **Nodes Upgrade** item.

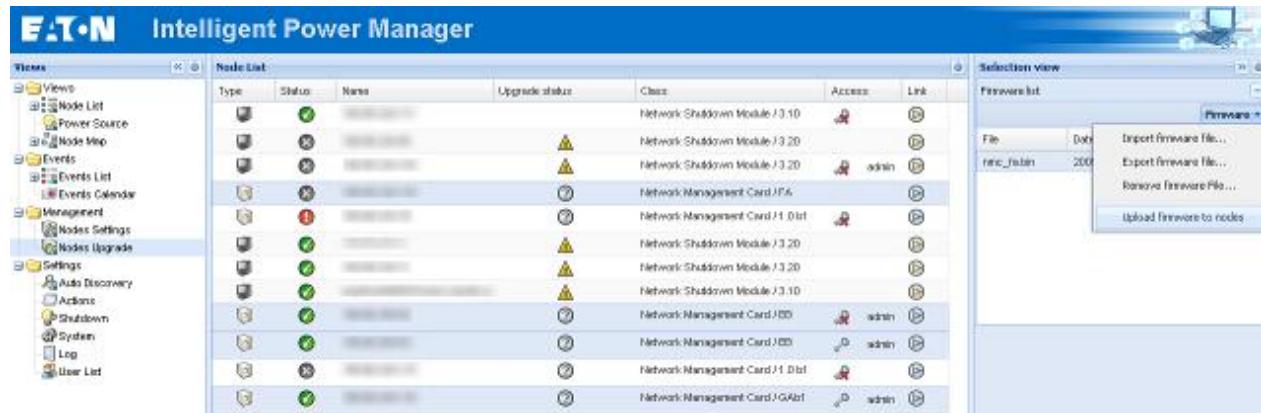


Perform this procedure to upload a Device firmware:

- Select the cards in the List.
- From the Node List button **► Set Login Parameters**, enter the card Login and Password. The access status changes from: **Access Denied** () to **Access OK** ().
- From the **Firmware ► Import Firmware File...** list box; the uploading window appears.
 - > Click **Browse ...** to select the firmware from a disk accessible from the computer.
 - > Click **Import**.
- Click on **Firmware ► Upload Firmware to nodes**.
- The cards will be updated with the firmware selected.

6.2.2 Upgrade applications

From the **Management** menu item, select the **Nodes Upgrade** item:

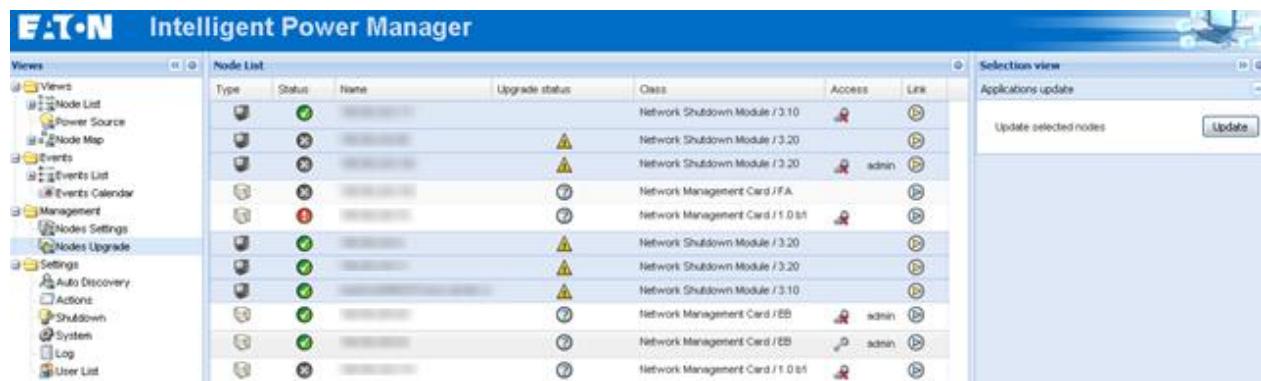

The screenshot shows the Eaton Intelligent Power Manager software interface. The left sidebar contains a 'Views' tree with 'Node List' selected. The main area is divided into two panels: 'Node List' and 'Selection view'. The 'Node List' panel shows a table of nodes with columns: Type, Status, Name, Upgrade status, Class, Access, and Link. The 'Selection view' panel shows an 'Applications update' list with a 'Update selected nodes' button and an 'Update' button.

Type	Status	Name	Upgrade status	Class	Access	Link
Network Shutdown Module	Green	Network Shutdown Module 1	OK	Network Shutdown Module / 3.10	Admin	Link
Network Shutdown Module	Green	Network Shutdown Module 2	OK	Network Shutdown Module / 3.20	Admin	Link
Network Shutdown Module	Green	Network Shutdown Module 3	OK	Network Shutdown Module / 3.20	Admin	Link
Network Management Card	Green	Network Management Card 1	OK	Network Management Card / FA	Admin	Link
Network Management Card	Green	Network Management Card 2	OK	Network Management Card / 0.0.1	Admin	Link
Network Shutdown Module	Green	Network Shutdown Module 4	OK	Network Shutdown Module / 3.20	Admin	Link
Network Shutdown Module	Green	Network Shutdown Module 5	OK	Network Shutdown Module / 3.20	Admin	Link
Network Shutdown Module	Green	Network Shutdown Module 6	OK	Network Shutdown Module / 3.10	Admin	Link
Network Management Card	Green	Network Management Card 7	OK	Network Management Card / EB	Admin	Link
Network Management Card	Green	Network Management Card 8	OK	Network Management Card / EB	Admin	Link
Network Management Card	Green	Network Management Card 9	OK	Network Management Card / 1.0.1	Admin	Link

Perform this procedure to update the applications:

- Select the applications in the **Node List**
- from the Node List button  **Set Login Parameters**, enter the access Login and Password
The access status changes from: **Access Denied**  to **Access OK** 
- From the Applications update panel, click on Update
- The status of the Applications with respect to the version is updated.

7 Virtualization Module


7.1 Introduction

The IPM Virtualization Module for VMware, Microsoft and Citrix requires a network shutdown environment. The UPS has to be connected through a network interface (e.g. NMC) Each peer-to-peer interface (i.e. USB/RS232) between IPP and the UPS doesn't allow using this virtualization module.

This module will allow functionality related to virtualization product.

7.2 Enabling the Virtualization Module

To enable the virtualization module you must go to the “System” ▶ “Module Settings” panel and enable it as shown in the following screenshot:

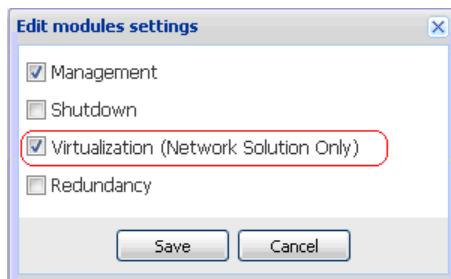


7.3 VMware

7.3.1 Standalone Hypervisor & Local Solution

This solution will require IPP and VMware vSphere Management Assistant (vMA) [Please refer to IPP User's guide](#)

7.3.1.1 Architecture

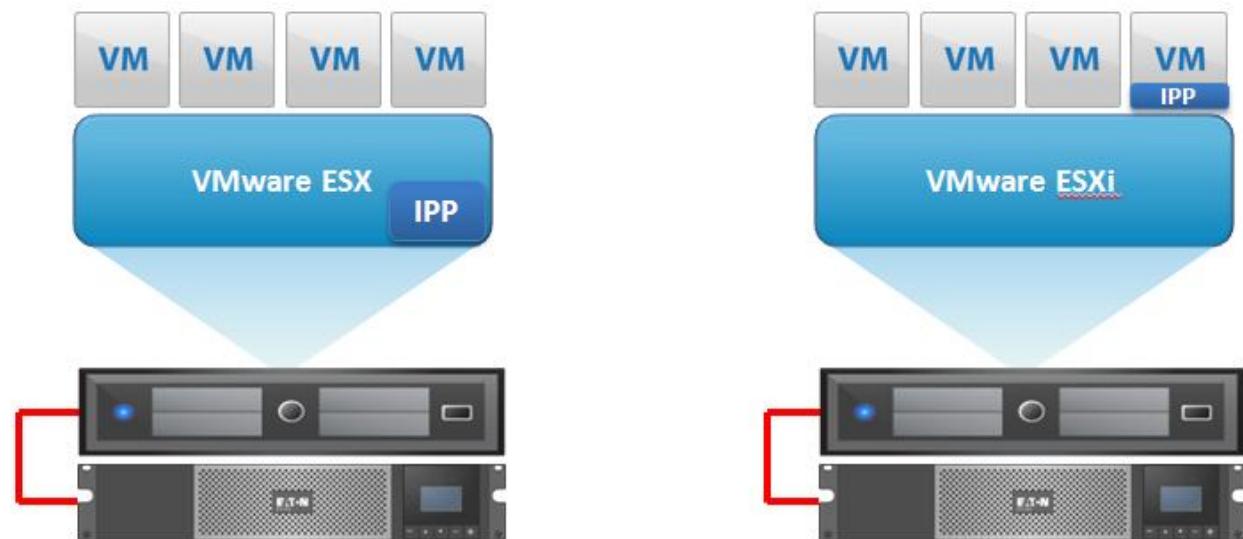

7.3.2 Multiple Hypervisor & Remote Solution


For multiple VMWare hosts, it is possible to manage shutdown through IPM by using or not vCenter Plug-in.

It provides following features:


- => Remote graceful Shutdown of multiple ESX/ESXi servers and hosted VMs.
- => ESX/ESXi Remote maintenance (vMotion)
- => an IPM Plug-in is created in vCenter
- => UPS events are accessible through vCenter

This solution is ideal for biggest infrastructures working through vCenter server

7.3.2.1 Architecture 1

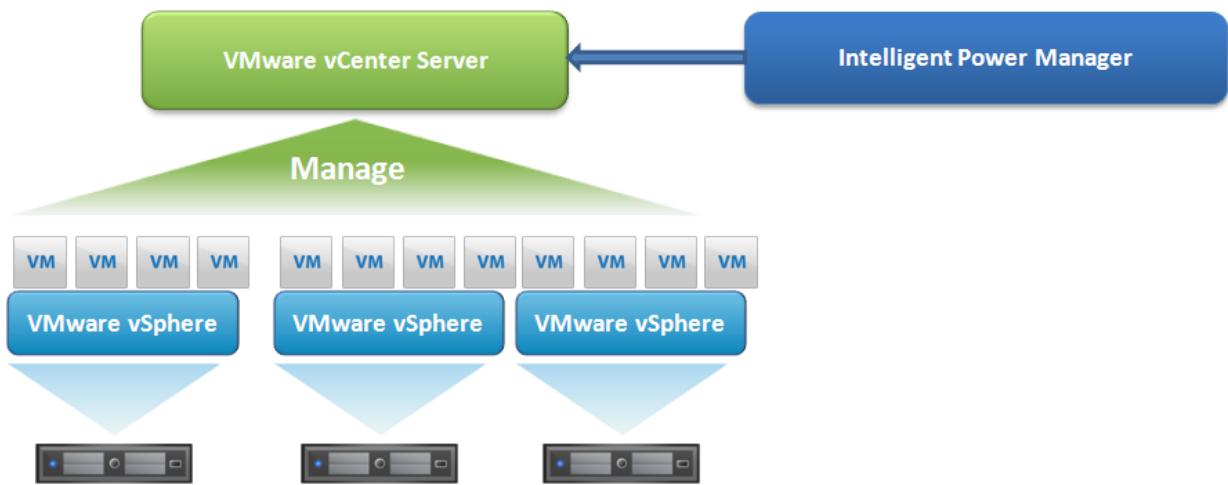

7.3.2.2 Architecture 2

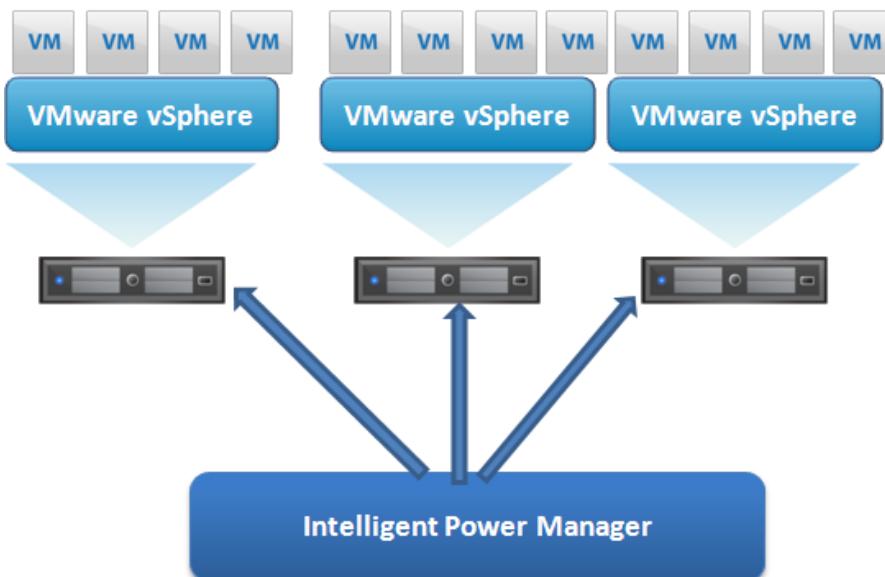

7.3.2.3 Prerequisites

The virtualization module requires the following prerequisites:


- VMware vCenter and vSphere Client installed.
Note that vCenter and IPM could be installed on the same network.
- To provide the VM graceful shutdown, you have to install VMware tools on each VM
- Since IPM 1.25, the vSphere SDK for Perl is no more required.

Note: You must also have a knowledge / experience with VMware Infrastructure.

7.3.2.4 Adding Manager or Hypervisor List

Steps:


- Enable the virtualization module
- See the new **Virtualization** menu in the “Settings” menu.
- Click on this new **Virtualization** menu
- Click on the option **Add Manager or Hypervisor List** on the right panel.

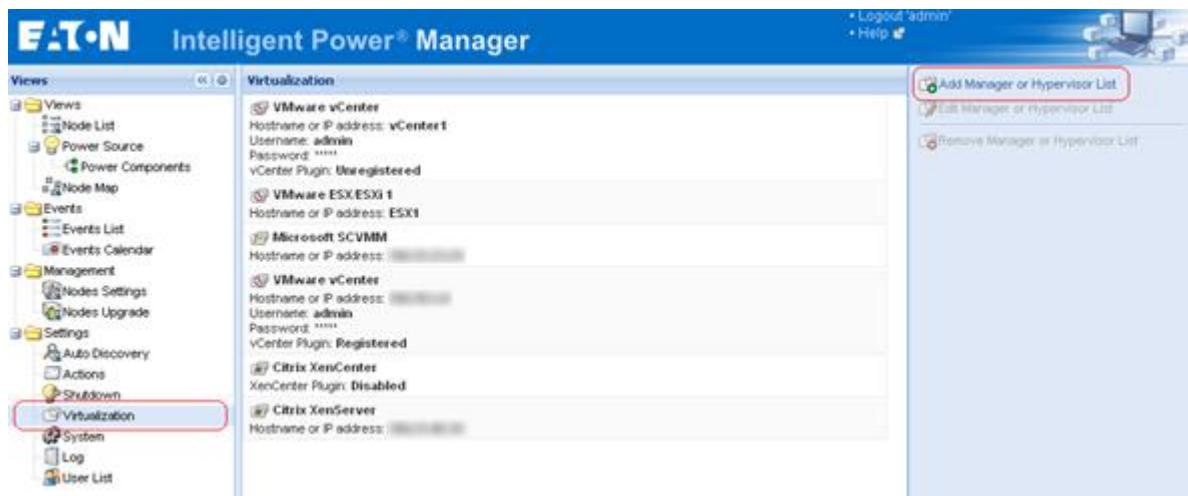

- To Edit or Remove, Managers or Hypervisors, you have to select a line in the center panel first.
- In the next paragraphs, we explain how to add different kinds of Managers and Hypervisors.

7.3.2.4.1 Adding a vCenter Server Manager

To add a new VMware vCenter, complete the following fields.

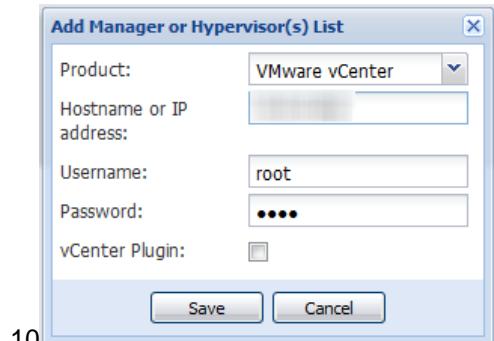


10

- Product: The type (VMware vCenter)
- Hostname or IP address: The VMware vCenter Hostname or IP address.
- Username: The VMware vCenter Administrator Username
- Password: The VMware vCenter Administrator Password.
- vCenter Plugin: Install and configure the Intelligent Power manager Plug-in into vCenter. Please consult the Appendix1 in this user manual when using this feature.

7.3.2.4.2 Adding a VMware ESX/ESXi Hypervisor List

To add a new VMware ESX/ESXi List, complete the fields below:

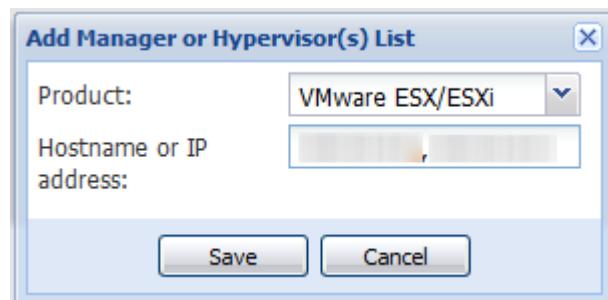

- Product: The type (VMware ESX/ESXi)
- Hostname or IP address: The List of VMware ESX/ESXi Hostname or IP address.

7.3.3 VMware Site Recovery Manager

Eaton developed a package to allow the connection between the Power and VMware SRM.

http://pqsoftware.eaton.com/install/win32/ipmap/UserGuide_VMWareSiteRecoveryManagerIPM.pdf

7.3.3.1 Why should I use it??

It will allow you to

1. **Starts recovery process on several different events:** IPM will initiate the execution of recovery plan upon several different events.

2. **Less down time for end users:** Virtual machines will be down only for the amount of time required to transfer of latest snapshot and will restart once transfer is complete. The unprotected VMs will continue to run on the primary site.
3. **Customization for end users:** User can customize the script included in the package as per his / her needs. E.g. user may want to configure SRM with IPM for low battery and protection loss features, then user is able to make such customizations. It will allow user to make the best alignment of his/her needs with this integration.
4. **Unattended execution of recovery plan before server crash:** SRM with IPM provides recovery even before the entire site crashes. With the use of SRM feature, user will have the backup ready even before the crash, which keeps user secured all the time.

7.3.4 VMware LoadShedding Package

Eaton developed a package to have a way to do a LoadShedding in your VMware Data Center.

[LoadShedding UserGuide](#)

These modules have a simple GUI to set priority to the virtual machines and provide flexibility to the user to configure the time to shutdown /suspend the virtual machines of every priority.

7.3.4.1 Why should I use it?


During utility failure, it can reduce the effective runtime of highly critical machines as battery capacity is limited. The Load Shedding package is a process of closing or shutting down less critical load so that remaining capacity can be used for highly critical loads.

7.4 Microsoft Solution

7.4.1 Standalone Hypervisor & Local Solution

This solution will require IPP Windows. [Please refer to IPP User's guide](#)

7.4.1.1 Architecture

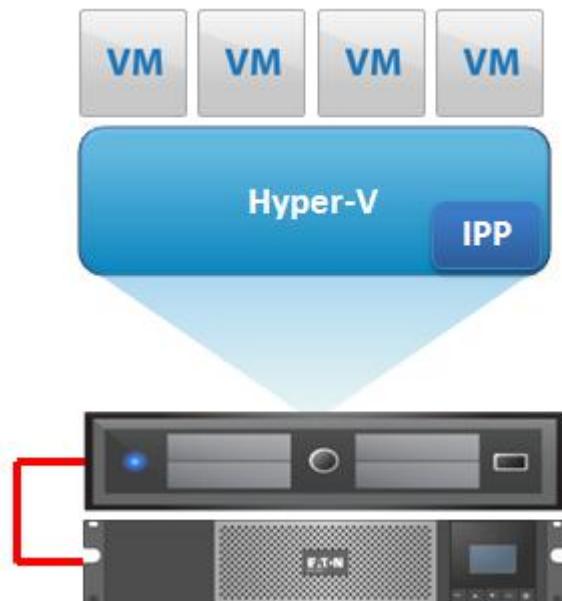

7.4.2 Multiple Hypervisor & Remote Solution

For multiple Hypervisor hosts, it is possible to manage shutdown through IPM by using System Center Virtual Machine Manager (SCVMM).


It provides following feature:

=> Hyper-V/Hyper-V server Remote maintenance to trigger VM Live Migration.

This solution is ideal for biggest infrastructures working through SCVMM server

This solution is described in this IPM user manual.

7.4.2.1 Architecture

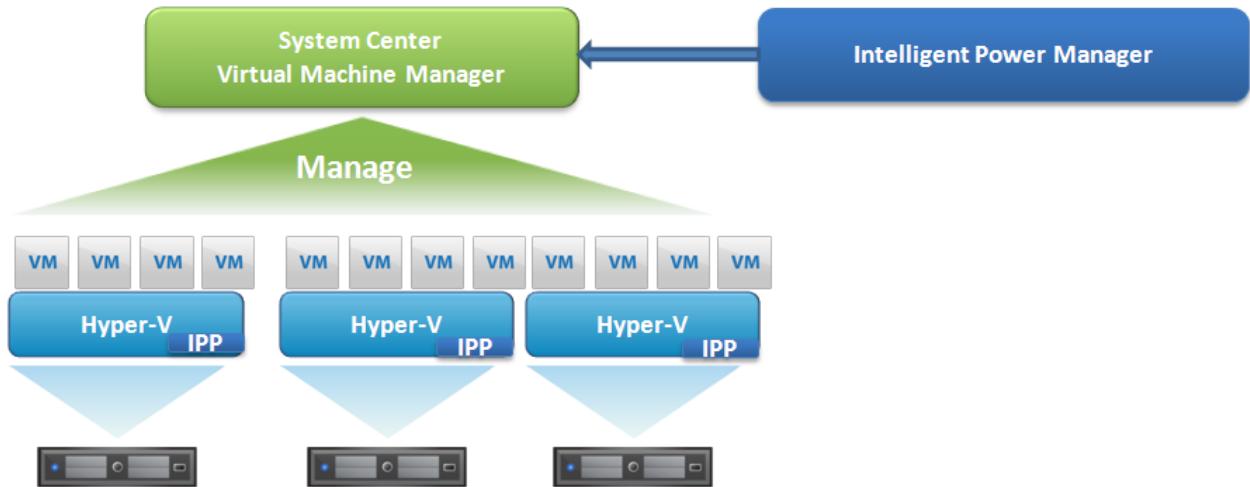

7.4.2.2 Prerequisites

The virtualization module needs following prerequisites:

- The Powershell Snapin for SCVMM. To get it, either
=> install the VMM console on the machine hosting IPM
=> or install IPM on the machine hosting SCVMM.
- The server hosting IPM must be on the same Windows Domain than SCVMM Server
- The server hosting IPM must enable the execution of third party scripts on the local machine (minimum access "Remote Signed") (examples: Set-ExecutionPolicy RemoteSigned).

The next screenshot displays the parameters after the configuration example.

```

Administrator: Windows PowerShell - Virtual Machine Manager
PS C:\Windows\system32> Set-ExecutionPolicy RemoteSigned
Execution Policy Change
The execution policy helps protect you from scripts that you do not trust.
Changing the execution policy might expose you to the security risks described
in the about_Execution_Policies help topic. Do you want to change the execution
policy?
[Y] Yes [N] No [S] Suspend [?] Help <default is "Y">:
PS C:\Windows\system32> Get-ExecutionPolicy -L
Scope          ExecutionPolicy
---          -----
MachinePolicy  Undefined
UserPolicy    Undefined
Process       Undefined
CurrentUser   Undefined
LocalMachine  RemoteSigned

```

- Click on Save when the fields are updated.

Note: When configuring the Login and Password, we recommend using the IPM Web interface through **https**. Using **http** is also possible but the Password is sent to the local or remote server clearly. In both

cases, the password is stored encrypted in IPM and is never sent again to the Client.

7.4.3 Adding a SCVMM Manager

To add a new Microsoft SCVMM, complete the fields below:



- Product The type (Microsoft SCVMM)
- Hostname or IP address The Microsoft SCVMM Hostname or IP address.

Click on Save after the fields are updated.

7.5 Citrix

7.5.1 Standalone Hypervisor & Local Solution

This solution will require IPP Linux. [Please refer to IPP User's guide](#)

7.5.1.1 Architecture



7.5.2 Multiple Hypervisor & Remote Solution

For multiple Hypervisor hosts, it is possible to manage shutdown through.

It provides following feature:


=> Xen server Remote maintenance to trigger VM Xen Motion.

=> Xen server Remote shutdown


This solution is ideal for biggest infrastructures working through Xen Center

Since IPM1.25 this solution is now integrated in IPM and described in the appendix chapter of this manual.

7.5.2.1 Architecture 1

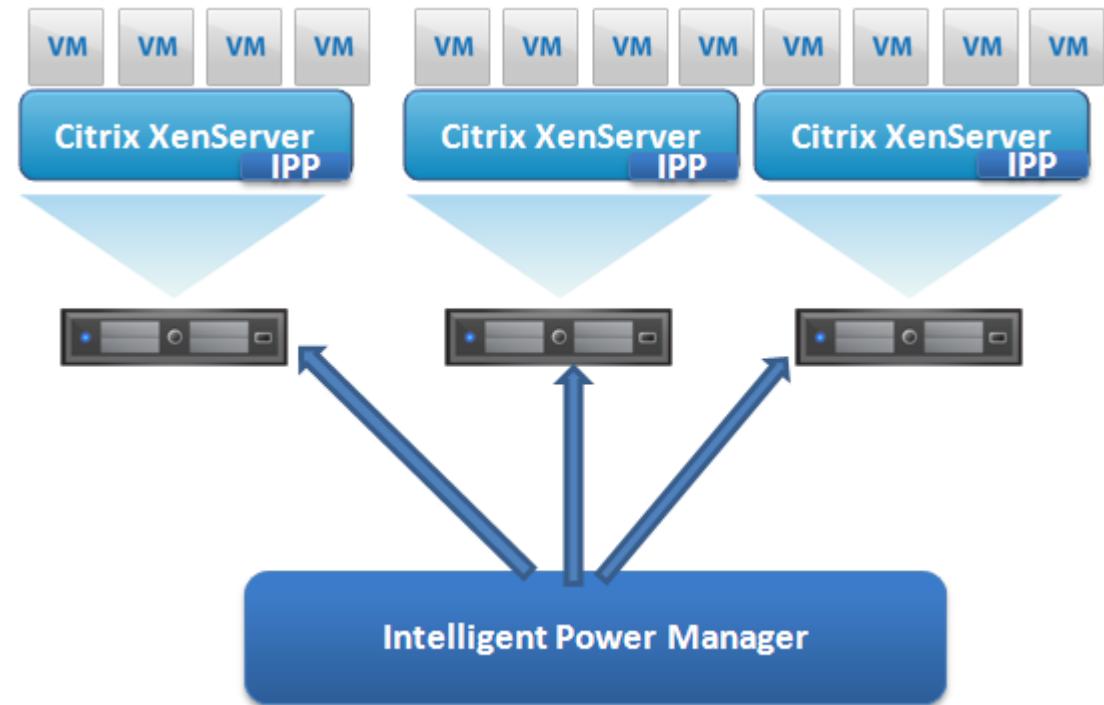

7.5.2.2 Architecture 2

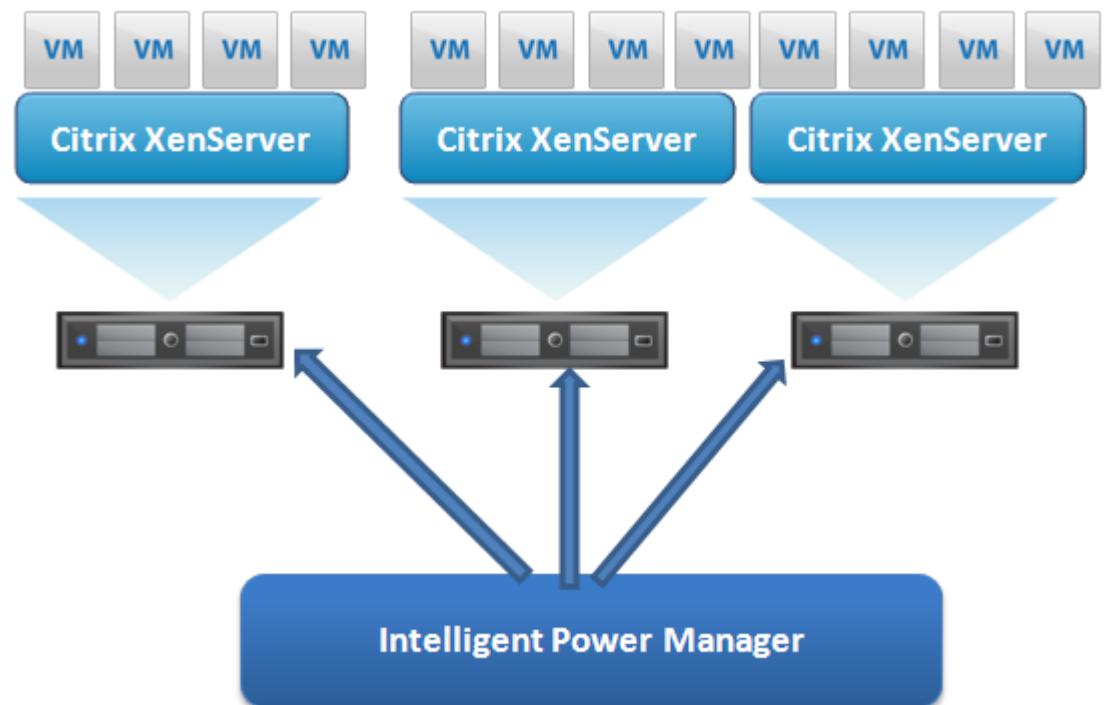

7.5.3 Prerequisites

The virtualization module needs following prerequisites:

- XenCenter installed to manage the XenServers
- To provide the VM graceful shutdown, you have to install Xen tools on each VM

7.5.4 Adding a Citrix XenServer Hypervisor List

To add a new Citrix XenServer List, complete the fields below:



- Product The type (Citrix XenServer)
- Hostname or IP address The List of Citrix XenServer Hostname or IP address.

7.5.5 Adding a XenCenter

As Citrix XenCenter is a Client and not a Manager, we add the possibility to install a plug-in on the system where XenCenter is installed.

This plug-in enables the user to use IPM into XenCenter.



(Refer to the following appendix: "Configuring the XenCenter Plug-in")

7.6 Redhat Solution

7.6.1 Architecture



7.6.2 Standalone Hypervisor & Local Solution

Eaton provides following solution for Redhat that is illustrated on the above architecture diagram:

- It provides graceful shutdown for KVM. IPP is installed on each KVM system.
[See the IPP user guide](#)

(Refer to the IPP Appendix document: [Installing and configuring Intelligent Power® Protector On KVM Virtualized Architecture](#)).

7.7 Xen Open Source Solution

7.7.1 Architecture



7.7.2 Standalone Hypervisor & Local Solution

Eaton provides following solution for Open source Xen that is illustrated on the above architecture diagram:

- It provides graceful shutdown for Xen. IPP is installed on each Xen system.
(Refer to the IPP Appendix document: [Installing and configuring Intelligent Power® Protector On Xen Virtualized Architecture](#)).

7.8 Configuring Hypervisors


7.8.1 Introduction

If you previously “Added a Manager” in IPM:

- vCenter or SCVMM: when you have added a manager in IPM, it connects to the manager
- IPM automatically retrieves the VMHost information and creates new nodes in IPM for each VMhost
- IPM automatically creates two different types of nodes that will be described after (you can see the new node in the Node List)
- You can now proceed to the Maintenance and Shutdown configuration step

If you previously “Added a Hypervisor List” in IPM:

- Once you have “Added a new list of Hypervisor”, IPM creates new nodes and waits for the credential.
- We explain on the next chapter how to configure the credentials for hypervisors (ESX/ESXi, XenServer)
- IPM creates two different types of nodes that will be described after (you can see the new node in the Node List)

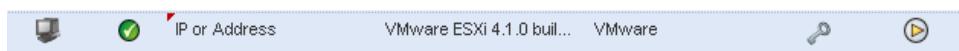

7.8.2 Credential configuration for the Hypervisors (ESX/ESXi, XenServer)

- You have to configure the node credential in the Node Configuration Panel.



- Once you have entered the correct information, IPM will retrieve Hypervisors information.
- You can now proceed to the Maintenance and Shutdown configuration step

7.9 Configuring Maintenance and Shutdown

7.9.1 Introduction


- Once you have entered the correct credential information for your Managers and Hypervisors, you have to configure the Maintenance and Shutdown sequences according to the availability needs of your IT infrastructure when power fails. There are two types of VMHost nodes as explained in following sections.

7.9.2 The VMhost has No IPP


There is no IPP installed on the server that is hosting the Hypervisor (VMHost). In such case the Shutdown is remotely done by IPM. **Only with VMware hypervisors and Citrix XenServer, this shutdown configuration is used.**

In this case, the node has both the functionalities of remote maintenance mode and remote shutdown .

You can configure the node and add a Power Source in the Node Configuration Panel shown below.

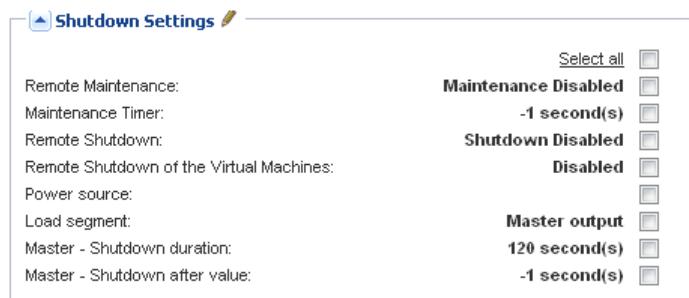

After Configuration (Please, refer to [Nodes Settings](#) paragraph to use the configuration interface.)

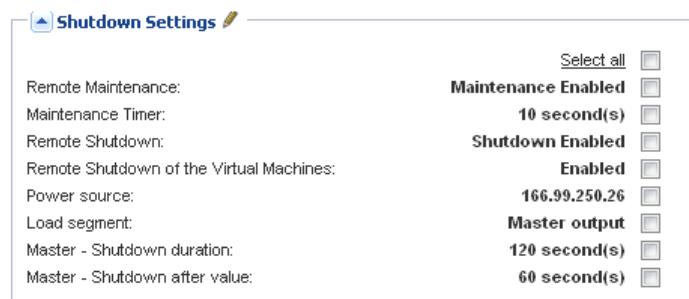

Parameters	Values	Description
Remote Maintenance	Enabled, Disabled	When enabled, it allows the server management tool to move the virtual machines from this server to another server in case of "UPS on battery state" and "Maintenance Timer elapsed"
Maintenance timer	User to Type a value	Time elapsed "on battery state" before the IPM triggers the state of the Hypervisor to change to maintenance mode
Remote Shutdown	Enabled, Disabled	When enabled, it allows IPM to gracefully shutdown this server in case of "UPS on battery state" and Shutdown criteria reached

Remote Shutdown of the Virtual Machines	Enabled, Disabled	Enables the IPM to shutdown the Virtual Machines before host gets shutdown and restart the VMs when the host restarts
PowerSource	IP address of UPS	The UPS powering this server. This node should exist in IPM
Load segment	Master, Load Segment1, Load Segment2	UPS load segment powering the server
Master – Shutdown duration	User to Type a value	This is a Server Shutdown criteria is the time needed for the server to shutdown gracefully
Master – Shutdown after value	User to Type a value	This is a Server Shutdown criteria is the time elapsed “on battery state” before graceful Shutdown. This timer must be greater than the maintenance timer. “-1” value means that timer is disabled

Note:

- The Remote Shutdown functionality is reserved for VMware ESX/ESXi and Citrix XenServer nodes. (Microsoft Hyper-V benefits from local IPP shutdown).
- The Remote Shutdown of the Virtual Machines is supported on VMware ESX/ESXi
- The Maintenance Timer must be less than the Shutdown after value.

7.9.3 IPM detects IPP running on the VMHost


There is an IPP installed on the server that is hosting the Hypervisor (VMHost). In such case the Shutdown is done by this IPP.

In this case, the node contains both parameter types:

- The remote maintenance mode feature parameters.
- The IPP shutdown parameters (as an IPP will perform locally the shutdown).

Note: all the parameters are retrieved from the IPP, and you will configure the IPP from IPM in this Node Configuration Panel.

Please, refer to Nodes Settings paragraph to use the configuration interface.

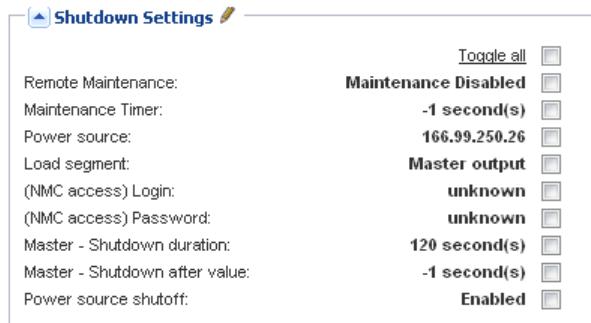

- Remote Maintenance Enabled or Disabled (When enabled, it allows the server management tool to move the virtual machines from this server to another server in case of “UPS on battery state” and Maintenance Timer elapsed).
- Maintenance timer Time elapsed “on battery state” before the IPM script changes the state of the Hypervisor to maintenance mode.
“-1” value means that timer is disabled.
Please refers to [Appendix: Configuring Maintenance mode and vMotion with vCenter](#) and [Appendix: Configuring Maintenance mode and LiveMigration with SCVMM](#)
- PowerSource The UPS powering this server.
- Load segmentUPS load segment powering the server.
- (NMC access) Login/Password: The Network Management Card Login/Password that allows IPP software to control NMC shutdown sequence.
- Master – Shutdown duration Server Shutdown criteria (time needed for server graceful shutdown).
- Master – Shutdown after value Server Shutdown criteria (time elapsed “on battery state” before graceful Shutdown) (This timer must be greater than the maintenance timer).
“-1” value means that timer is disabled.
- Power source shutoff Disabled (Enabled is used only for server connected with UPS though RS232 or USB. Virtualization behavior requires Ethernet connectivity (NMC card)).

Note: If you install an IPP on the VMHost after the IPM node has been created:

- Delete the node in IPM,
- Rediscover the node with the “Address Scan” in the Auto Discovery panel,
- IPM will create the right node type and retrieve both the VMHost information and the IPP information.

8 Redundancy


8.1 Introduction

Intelligent Power® Manager can supervise composite devices. Composite devices are virtual nodes composed of UPSs mounted with specific redundancy topologies (*Redundant Supplies*, *Hot Standby* or *Static Transfer Switch* for two components and *Parallel* for two or more components) and a dedicated redundancy level.

This Redundancy feature has to be Enabled from the **Settings ▶ System ▶ Modules Settings**


Intelligent Power Manager will then:

- Supervise composite devices
- Shutdown IPM server when Composite device is set as power source (shutdown feature is activated).

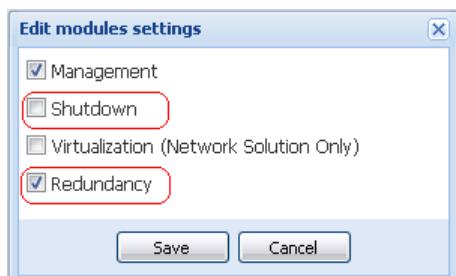


Here are illustrated the electrical redundancy topologies:


- Redundant Supplies (dual feed or triple feed or ...)

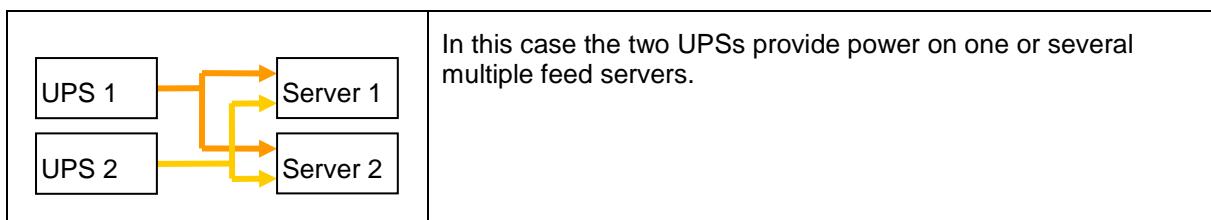


- Hot Standby

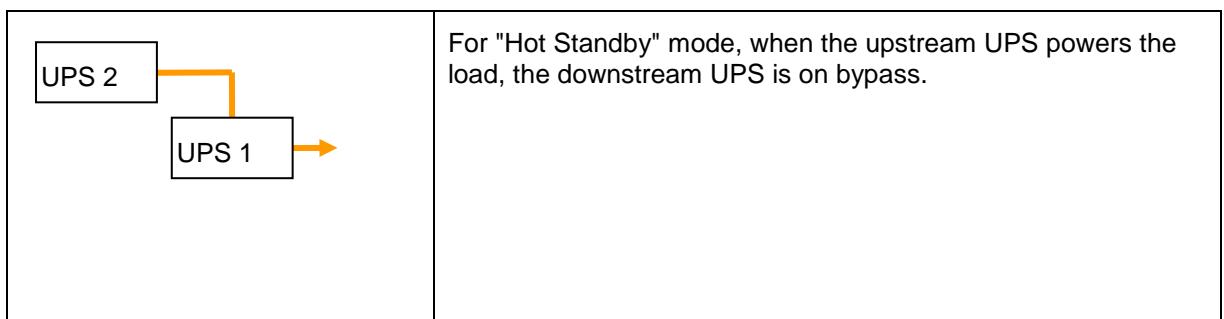

- Static Transfer Switch for two components

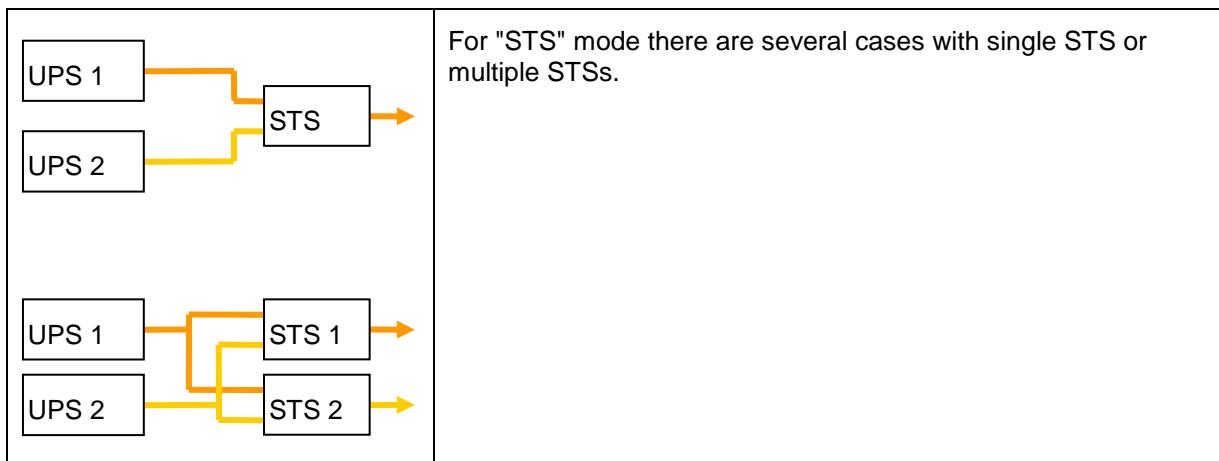

- Parallel for two or more components

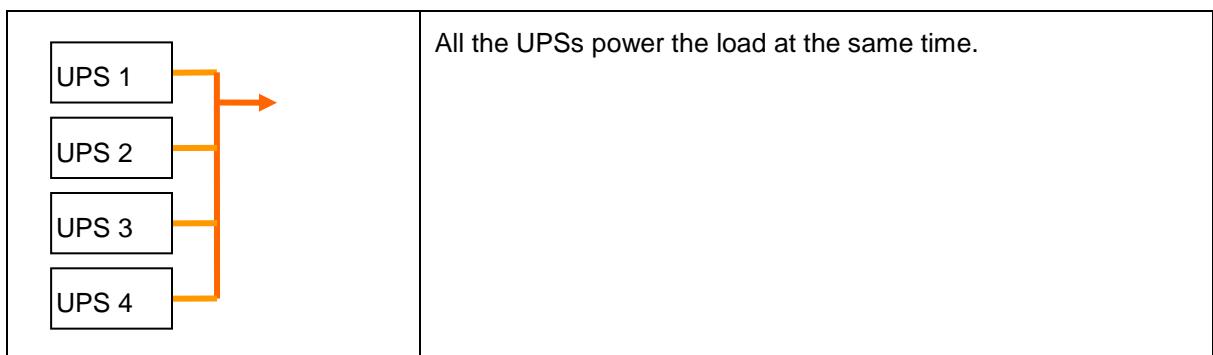

8.2 Redundancy configuration

- Login with an administrator user profile
- Select two or more nodes and click on the “Set composite device” menu item:

The screenshot shows the Eaton Intelligent Power® Manager software interface with the following details:

- Views:** Power Source, Power Components, Events, Events List, Events Calendar, Settings, Auto Discovery (selected), Actions, Shutdown, System, Log, User List.
- Node List:** A table showing the following data for several nodes:

Type	Status	Name	Mac Address	Class	Location	Contact
Power Source	OK	UPS 1	00:22:19:FF:8E:5E	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 2	00:22:19:FF:8E:72	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 3	00:20:85:FD:76:08	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 4	00:20:85:FD:F6:2C	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 5	00:22:19:FF:8E:79	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 6	00:20:85:FB:56:1E	ConnectUPS WebSNM	IE LAB 9130 DUBAI c...	Jerome Veyrier
Power Source	OK	UPS 7	00:06:23:00:1E:7F	Network Management	Computer Room	Computer Room Manager
Power Source	OK	UPS 8	00:20:85:FB:56:1E	Network Management	Eric Office	Eric

- Context Menu (right-clicked on a node):**
 - Quick scan
 - Range scan
 - Address(es) scan
 - Set node access parameters
 - Edit node information
 - Remove nodes
 - Select all
 - Deselect all
 - Set as power source
 - Set composite device

- In the dialog box, enter redundancy mode and level, eventually specify a device name

Device name: User name of the composite device

Redundancy mode: Refer to the Introduction chapter to select the correct electrical topology (Parallel / Redundant Supplies / Hot Standby / Static Transfer Switch)

Redundancy Level: It is the minimal number of redundant UPSs powering your system:

The default value is 0.

If you set this parameter to a higher level you will receive the Redundancy Lost alarm when you don't have enough redundant UPSs.



- Then the new node is created.
- You can see it in the “Auto discovery” node list:

You can set it as power source.

You can edit composite device properties by selecting it in the discovery view then click again on the “Set composite device” menu item.

If you select components of a composite device and click on the “Set composite device” menu item again, properties of existing composite device are shown; no new composite device is created so no composite device duplication is possible.

The created “Virtual Power Source” is counted as a node for the licensing node limitation.

8.3 Redundancy views

8.3.1 Redundancy view in *Node List*

The screenshot shows the Eaton Intelligent Power Manager software interface. The main window is divided into several panels:

- Views:** A tree view of the application's modules, including Views, Power Source, Events, Management, and Settings.
- Node List:** A table showing a list of nodes. The columns are Type, Status, Name, and Description. The table contains 21 rows, with the last row being a "My VPS" entry.
- Selection view:** A panel on the right that is active for the "My VPS" node. It contains four sub-sections:
 - Information:** Shows a summary for "My VPS" with fields: Description (Virtual Power Source), Redundancy mode (Parallel), and Redundancy level (1).
 - Status:** A table showing the status of various components.
 - Events:** A table showing recent events with columns: Status, Date, and Message.
 - Power Components:** A table showing power component states with columns: Type, Status, Name, Load..., and Battery... (with corresponding progress bars).

At the bottom of the interface, there are status indicators: OK: 10, Warning: 5, Critical: 2, Unknown: 1, and Last event: 06/14/11 - 1:34:09 pm - Communication.


When a composite device is selected in the *node list*, the user can view it in the *selection view*, with following information:

- Dedicated states in “*Information*” and “*Status*” panels.
- The “*Events*” panel shows events from the composite devices and all its child components.
- A dedicated “*Power components*” panel displays component states including load level and battery run time.

8.3.2 Composite device in *Power source view*


When “*Redundancy and shutdown*” module are activated, a composite device can be selected as power source. The user can show it in the “*Power Source*” view.

In this case, *Information*, *Status*, *Events* and *Power components* panels are displayed with specifics data.

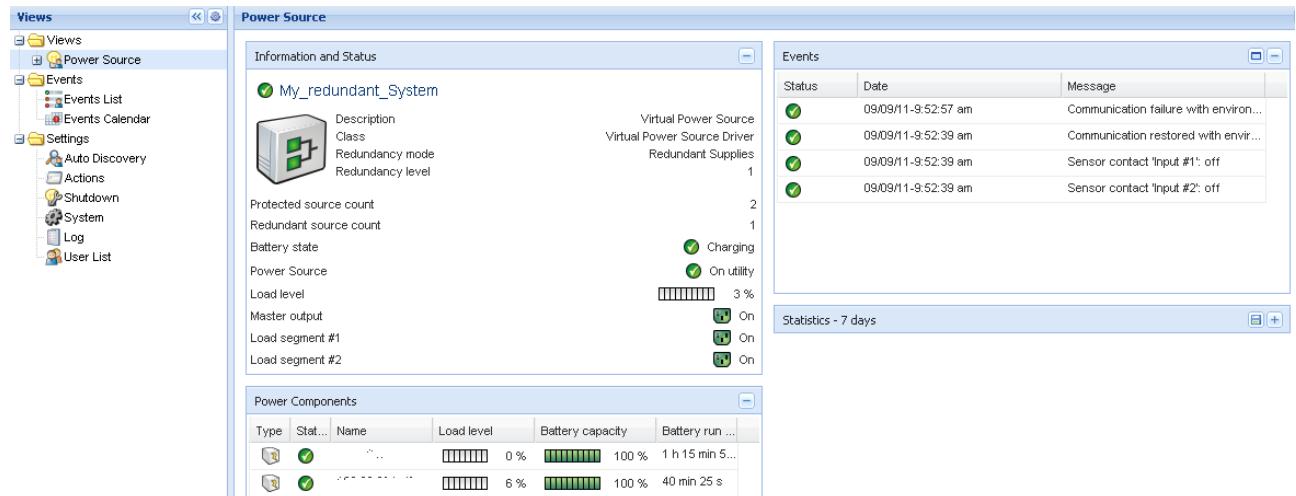

8.3.3 Power components sub view

When “*Redundancy and shutdown*” module are activated, a new view called “*Power components*” is available as a sub view of “*Power source*”. This view shows a list of nodes with their properties but just with components of the selected power source if it is a composite device.

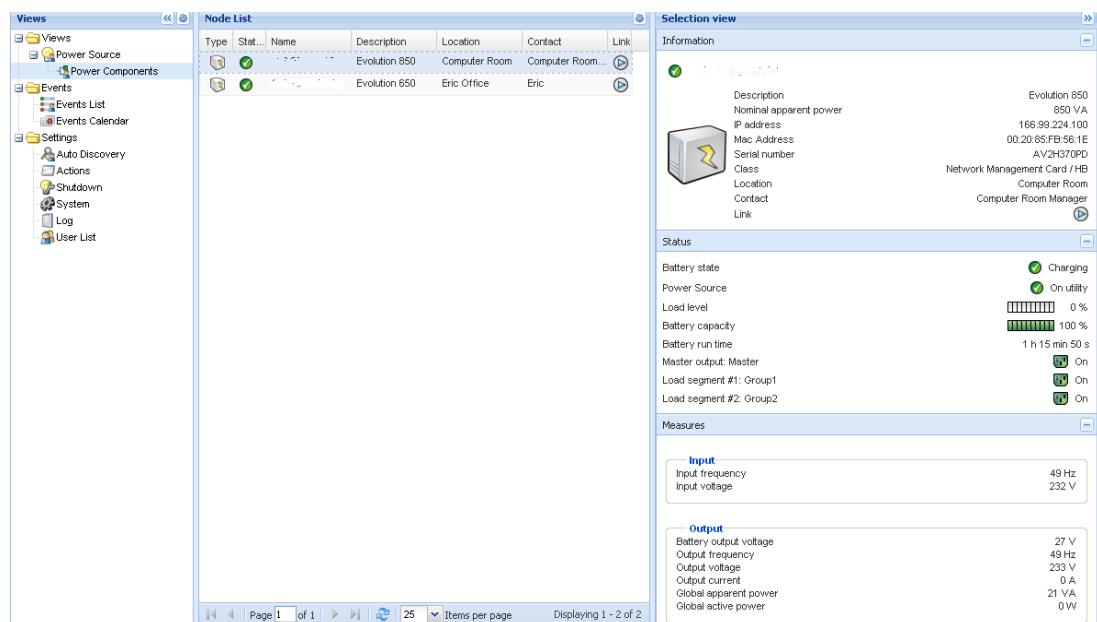

Power components sub view


8.4 Redundancy use case (if shutdown is activated)

We describe several typical use cases that will help you to configure properly the redundant shutdown sequence according to your needs.

Use Case #1: The user wants to have the longest backup time with the redundant configuration

- The user has to use the default IPM Configuration.

The next screenshot illustrates this IPM default configuration available from **Settings ▶ Shutdown ▶ Edit Shutdown Configuration**.

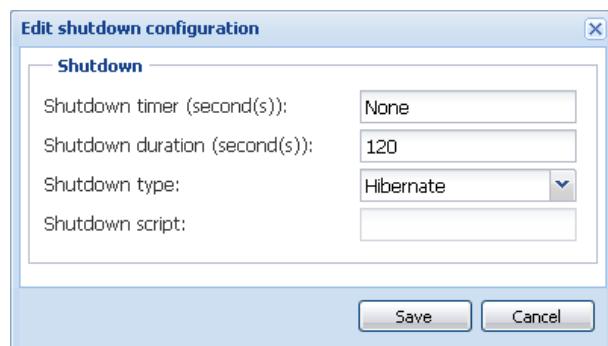

Shutdown configuration editor

- The user has to use the default IPM Configuration.

e.g. with Network-MS (ex 66102 / 103006826) and Modbus-MS (ex 66103), NMC default shutdown configuration is available from **UPS ▶ Shutdown Configuration** as illustrated on next screenshot:

Network Management Card

- e.g. with ConnectUPS-X Slot or ConnectUPS-BD, NMC default shutdown configuration is available from **Configuration > UPS Shutdown and Restart Settings** as illustrated on next screenshot:


Load Segment	Load Segment Name	Load Segment to Turn Off following OS Shutdown (Yes/No)	Delay Before Segment Turns Off following the start of the Client's OS Shutdown (30 - 3600 Seconds)	Load Segment to Restart following the return of AC Line (Yes/No)	Delay Before Segment Restart (30 - 3600 Seconds)
1	Segment 1	Yes	30	Yes	30
2	Segment 2	Yes	30	Yes	30

Use Case #2: The user wants to have a shutdown after a predefined time of 10 mins. The shutdown has to occur even if only one UPS is on battery.

=> In this case, each server can have its own shutdown timer (10 mins, 8 mins, 6 mins...)

- The user has to configure a shutdown timer of 10 minutes in IPM.

The next screenshot illustrates this IPM default configuration available from **Settings > Shutdown > Edit Shutdown Configuration**.

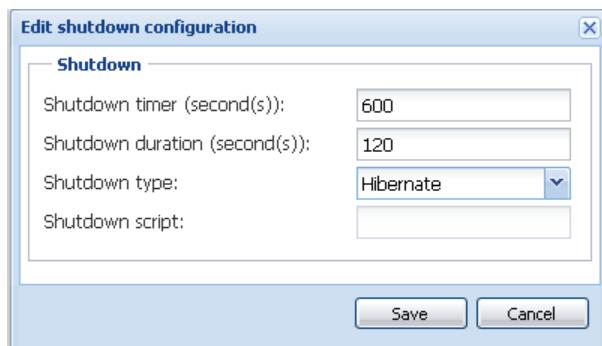

Use Case #3: The user wants to have a shutdown starting 10 mins from the last detected Utility failure event. (We have 2 UPSs, one of them is redundant)
=> In this case, all servers shutdown at the same time.

- This is the default IPM configuration
- The user has to configure a shutdown timer of 10 mins in all the NMCs
In this case, the last UPS will send the shutdown order after 10 min. if it runs on battery. If the last UPS never run on battery, the first UPS will simply shutdown at the end of autonomy and the last UPS will take the load.(if it has the capacity, otherwise the shutdown will occur sooner)
NMC Shutdown configuration is available from **UPS Shutdown Configuration** as illustrated on next screenshot:

Network Management Card

Shutdown Parameters

Evolution 850

Output	On battery	System Shutdown	Restart
Master	Shutdown if Remaining time under: <input type="text" value="180"/> sec if Capacity under: <input type="text" value="20"/> % <input checked="" type="checkbox"/> after: <input type="text" value="10"/> min	Shutdown duration: <input type="text" value="120"/> sec	If Capacity exceeds: <input type="text" value="0"/> %
Group1	Switch Off after: <input type="text" value="65535"/> sec if Capacity under: <input type="text" value="0"/> %	Shutdown duration: <input type="text" value="120"/> sec	Switch On after: <input type="text" value="30"/> sec
Group2	Switch Off after: <input type="text" value="65535"/> sec if Capacity under: <input type="text" value="0"/> %	Shutdown duration: <input type="text" value="120"/> sec	Switch On after: <input type="text" value="30"/> sec

Show advanced parameters

Save modified settings:

ConnectUPS™ Web/SNMP

10/17/2011 16:23:05
UPS Location:

AC Fail Event Actions:


Delay Before First AC Fail Warning Message (0-999 Seconds, 0 =No Message) 10
Warning Interval (0-9999 Seconds, 0 =No Message Repeat) 60

Load Segment	Load Segment Name	Notify Client OS to Shutdown on an AC Failure (Yes/No)	Number of Seconds the AC Failure must last before Client is notified to start OS Shutdown (1 - 21600 Seconds)
1	Segment 1	Yes	600
2	Segment 2	Yes	600

Use Case #4: The user wants to have a shutdown when the remaining time of the last UPS is 10 minutes
=> In this case, each server can have its own shutdown duration (10 mins, 8 mins, 3 mins...)

- The user has to configure a shutdown duration of 10 mins in IPM

The next screenshot illustrates this IPM default configuration available from **Settings ▶ Shutdown ▶ Edit Shutdown Configuration.**

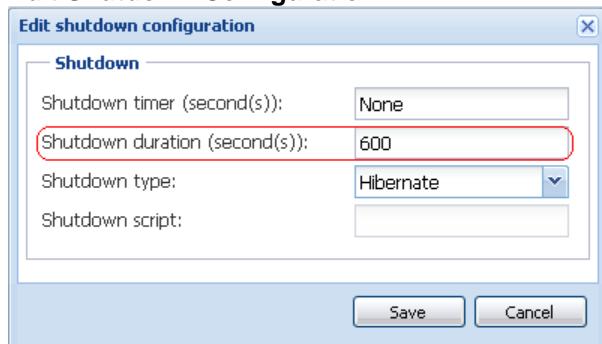


Shutdown configuration editor

- The user has to use the default Network Card Configuration (see UseCase #1 for more details.)

8.5 Redundancy advanced behavior example

For the following tables we take a parallel UPS configuration with 4 UPSs (Each UPS is 20 kW)

For this parallel topology, the Load can vary between 0 and 80 KW.

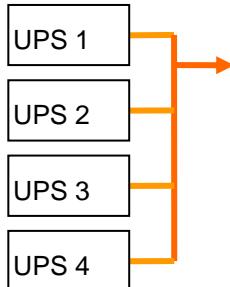

Redundancy alarm Management with 4 modules

According to the user defined “Redundancy Level” and the “Load”, we detail following information:

- R is the number of redundant UPSs
- Status of Redundancy lost alarm

Load / Redundancy Level	Load < 20 KW	20 KW < Load < 40 KW	40 KW < Load < 60 KW	60 KW < Load < 80 KW
0	R=3	R=2	R=1	R=0
1	R=3	R=2	R=1	R=0 ► Redundancy Lost active
2	R=3	R=2	R=1 ► Redundancy Lost active	R=0 ► Redundancy Lost active
3	R=3	R=2 ► Redundancy Lost active	R=1 ► Redundancy Lost active	R=0 ► Redundancy Lost active

Protection alarm Management with 4 modules

According to the “Load” and the “Number of failed UPSs”, we detail following information:

- P is the number of UPSs protecting the load
- R is the number of redundant UPSs
- Status of Protection lost alarm

Load / Failures	Load < 20 KW	20 KW < Load < 40 KW	40 KW < Load < 60 KW	60 KW < Load < 80 KW
No failure.	P=4; R=3	P=4; R=2	P=4; R=1	P=4; R=0
1 failure.	P=3; R=2	P=3; R=1	P=3; R=0	P=3; R=0 ► Protection Lost active
2 failures.	P=2; R=1	P=2; R=0	P=2; R=0 ► Protection Lost active	P=2; R=0 ► Protection Lost active
3 failures.	P=1; R=0	P=1; R=0 ► Protection Lost active	P=1; R=0 ► Protection Lost active	P=1; R=0 ► Protection Lost active
4 failures.	P=0; R=0 ► Protection Lost active			

8.6 Redundancy compatibility list

Eaton has tested in redundant mode following UPSs and topologies

Other topologies or UPSs may work but have not been tested

UPS	Parallel	Multiple Feed	Hot Standby	STS
9120, 9130, 9135	NA	✓NET ✓USB	NA	✓NET ✓USB
Eaton 5P / 5PX / Evolution / Evolution S	NA	✓NET ✓USB	NA	✓NET ✓USB
Pulsar EX 700 / 3000	NA	✓NET ✓USB	NA	✓NET ✓USB
Eaton 9SX / 9PX	NA	✓NET ✓USB	NA	✓NET ✓USB
Pulsar MX 1+1	✓NET	NA	NA	NA
Pulsar MX Frame 16 U	NA	✓NET ✓USB	NA	✓NET ✓USB
EX RT	NA	✓NET	✓NET (*)	✓NET

UPS Compatibility List for Redundancy on 1-phase UPSs

UPS	Parallel	Multiple Feed	Hot Standby	STS
Blade UPS	✓NET	✓NET	NA	NA
9x55 (9155 and 9355)	✓NET	✓NET	NA	NA
9390	✓NET	✓NET	NA	NA
9395	✓NET	✓NET	NA	NA
Eaton 9E Essential	NA	✓NET	NA	NA

UPS Compatibility List for Redundancy on 3-phases UPSs

✓NET: Acquisition through the Network Card

✓USB: Acquisition through USB

NA: Not Applicable

✓NET (*): Behavior has been implemented, but has not been tested


9 User Drivers

9.1 Introduction

This advanced and very powerful feature allows IPM to supervise any SNMP or NUT (*) available device. The user is allowed to customize and adapt the IPM acquisition engine to any kind of Data Center device (HVAC, Rack controller, storage, DC Power System controller, etc.)

This function is only accessible with administrator right access.

9.2 User drivers editor

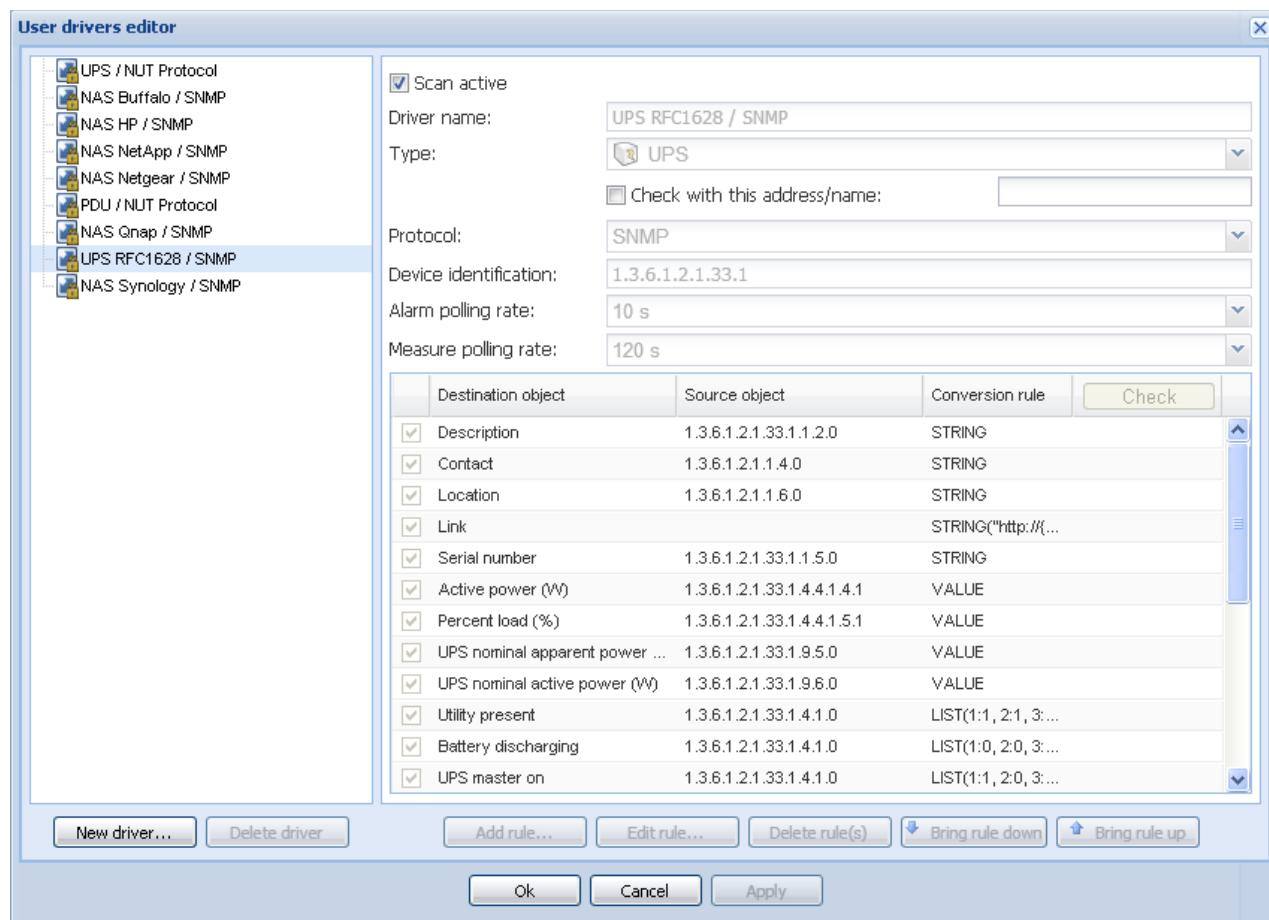

User drivers editor

9.2.1 Description

The “User drivers editor” is accessible from **Auto Discovery ▶ User driver editor....**

By default, the user driver function is activated.

You can enable or disable this function with the “User drivers” item in the “*Modules Settings*”.

If you disable this function, nodes already discovered and using a user driver are still managed.

The User drivers editor is used to integrate new devices in the IPM supervision application by using following objects:

- ⇒ predefined common base objects and
- ⇒ user specific objects.

A list of predefined custom drivers is managed by the application:

- UPS RFC1628 / SNMP: Manages UPS which implement the SNMP mib RFC1628.
- NAS Buffalo / SNMP: Manages the SNMP Buffalo Network Attached Storage (NAS).
- NAS HP / SNMP: Manages the SNMP HP Network Attached Storage (NAS).
- NAS NetApp / SNMP: Manages the SNMP NetApp Network Attached Storage (NAS).
- NAS Netgear / SNMP: Manages the SNMP Netgear Network Attached Storage (NAS).
- NAS Qnap / SNMP: Manages the SNMP Qnap Network Attached Storage (NAS).
- NAS Synology / SNMP: Manages the SNMP Synology Network Attached Storage (NAS).
- PDU / NUT Protocol: Manages the SNMP PDU via NUT (*).
- UPS / NUT Protocol: Manages the SNMP UPS via NUT (*).

(*) NUT: Open source software Network UPS Tools (<http://www.networkupstools.org>).

9.2.2 New driver

The “New driver...” button provides the ability to create a new empty driver or use a copy of an existing driver. Predefined drivers provided with the application are read only and cannot be changed. They can only be deactivated or duplicated for customization purpose.

9.2.3 Delete driver

The “Delete driver” button provides the ability to delete the selected driver.

Note: When a driver is deleted, after applying modifications, it is not possible to recover this driver.

9.2.4 Driver details

Scan active

This option provides the ability to activate or deactivate a driver. When this option is unchecked, the driver is filtered during discovery action. It allows using a modified copy of a driver instead of the default driver.

Driver name

This name defines the unique friendly name of the driver. This name is displayed in the information “Class” of the node view.

Type

Defines the driver type. Here is the list of the possible types:

- UPS device
- PDU device

- Power meter
- Power generator
- DC controller
- Power over ethernet appliance
- Server
- Storage appliance
- Network appliance
- Ambiance meter
- Cooling system
- Other device

Check with this address

This option provides the ability to check the rules result with an address or a device host name.

Notes:

- For SNMP protocol, it is the global scan settings which are using. If you need special access for your driver, you need to change temporally these settings.
- For NUT protocol, use <IP address or host name>/<Device ID (*>)
(*) <Device ID>: Name of the NUT device (e.g.: Section header name defined in ups.conf file for ups).

Refer to next paragraph for “rules definition”

Protocol

- SNMP: Provides support of SNMP v1 and v3 driver.
- NUT: Provides support of Network UPS Tools (NUT) client Interface.

Device identification

This feature defines the device identification used for device recognition during discovery.

For SNMP device, use the SysOID value or the root OID of the device if the SysOID is not managed by the device.

Alarm polling rate

This feature defines the polling rate for objects of type alarm.

Note: Information type data are acquired only once at driver reset.

Measure polling rate

This feature defines the polling rate for objects of measure type.

Note: Polling of measure data type can be done simultaneously with alarm data type.

In this case, only one task will be cyclically executed.

Rule list

The central part of the “Users driver editor” displays in a table the list of defined rules for the selected driver.

A rule defines the relation between a “source object name” and a “destination object name”.

- The “source object name” is the data to acquire in the device.
- The “destination object name” is the internal object name managed by the IPM application.

A destination object can be defined by several complementary rules.

For a same destination object, if a rule is not applicable, it takes the next rule defined in the list.

To define rules, you can:

- Add a new rule.
- Edit the selected rule.
- Delete the selected rule(s).
- Bring a rule down.
- Bring a rule up.


You can enable or disable a rule with the check box in the first column.

When a rule is disabled, the data defined in the rule will not be acquired anymore.

The “Check” button in the header table is used to compute and display the result for each rule according parameters. The result is computed with the address or the name entered in the area “Check with this address/name”.

Note: The “Check” button is enabled only if an address or a name is defined in the area “Check with this address/name”.

9.3 Rule editor

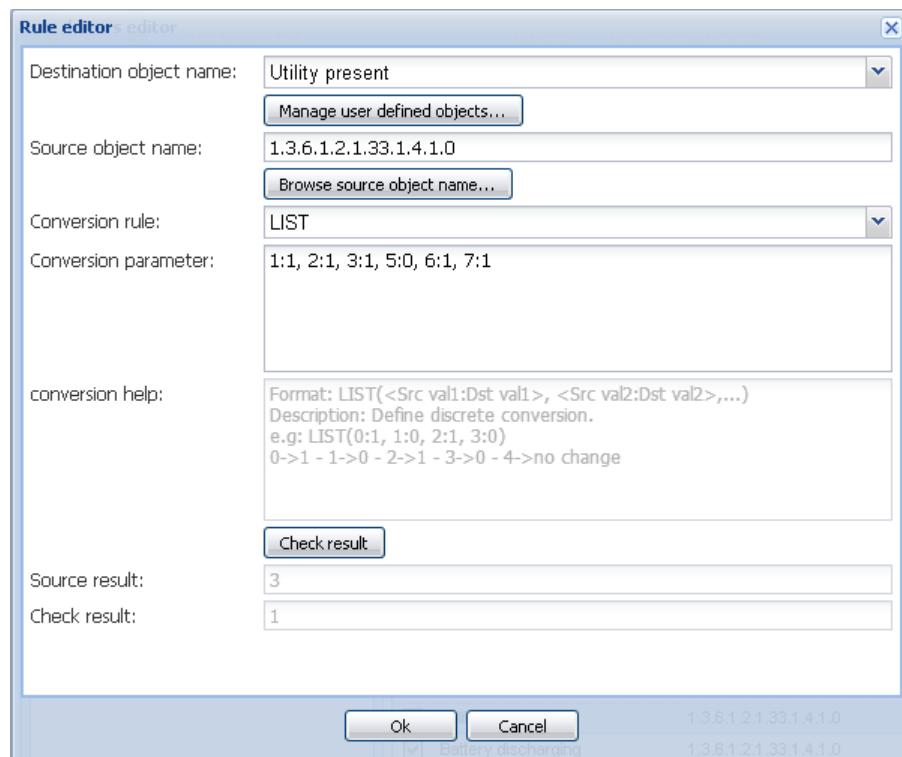

Rule editor

9.3.1 Destination object name

This feature defines the name of the destination object.

It can be either:

- a “well known” and predefined object which is a standard object managed by the IPM application or
- a specific user defined object. The user can create a specific user object when the needed object is not defined in the standard object list.

9.3.1.1 Standard objects

Here is the list of standard objects grouped by categories:

Information

- Name
- Description
- Contact
- Location
- Link

- Serial number
- Communication description
- Platform
- Mac address
- Version
- Manufacturer
- UPS nominal active power (W)
- UPS nominal apparent power (VA)
- UPS master switchable
- UPS outlet #1 switchable
- UPS outlet #2 switchable

Status

- Communication lost
- Communication error
- Overload warning
- Percent load (%)
- Shutdown imminent
- UPS internal failure
- UPS overload
- UPS master on
- Utility present
- Redundancy lost
- Protection lost
- Automatic bypass in tolerance
- On automatic bypass
- On manual bypass
- UPS master shutdown delay (s)
- UPS outlet #1 shutdown delay (s)
- UPS outlet #2 shutdown delay (s)
- UPS master startup delay (s)
- UPS outlet #1 startup delay (s)
- UPS outlet #2 startup delay (s)
- PDU outlet [x] shutdown delay (s)
- PDU outlet [x] startup delay (s)

Input

- UPS input voltage (V)
- UPS input current (A)
- UPS input frequency (Hz)
- UPS automatic bypass voltage (V)
- UPS automatic bypass current (A)
- UPS automatic bypass frequency (Hz)
- PDU input voltage (V)

Output

- Active power (W)
- Apparent power (VA)
- UPS outlet #1 on
- UPS outlet #2 on
- UPS outlet #1 active power (W)
- UPS outlet #2 active power (W)
- UPS power factor
- UPS output voltage (V)
- UPS output current (A)
- UPS output frequency (Hz)
- PDU number outlet
- PDU outlet [x] number
- PDU outlet [x] name
- PDU outlet [x] switchable
- PDU outlet [x] on
- PDU outlet [x] voltage (V)
- PDU outlet [x] current (A)
- PDU outlet [x] apparent power (VA)
- PDU outlet [x] active power (W)
- PDU outlet [x] power factor

Battery


- Battery charging
- Battery discharging
- Battery low
- Battery fault
- Battery capacity (%)

- Battery runtime (s)
- Battery voltage (V)

Environment

- Environment communication lost
- Environment humidity alarm
- Environment temperature alarm
- Environment dry contact [x]
- Level environment dry contact [x] opened
- Level environment dry contact [x] closed
- Environment temperature (°C)
- Environment humidity (%)

9.3.1.2 User defined objects

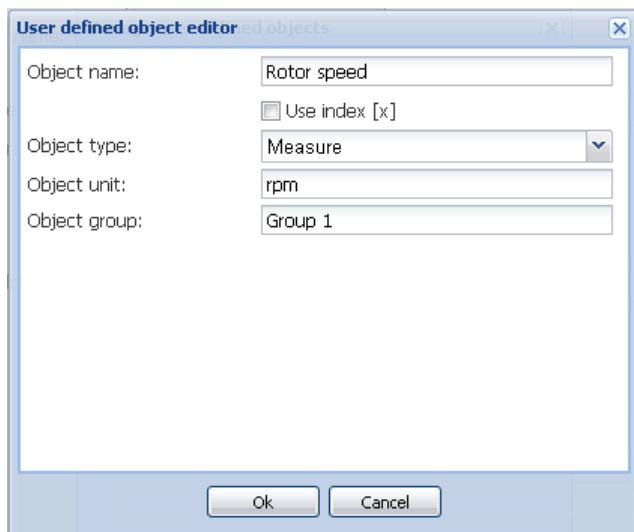

User defined object editor

It is possible to define your own object list to link for a specific device type.

Important notes:

- The user defined objects will **only** be displayed in a specific “node view” panel called “Other data”. These user defined objects are displayed as a raw list sorted by groups.
- The standard objects are **NOT** displayed in the “Other data” panel. These standard objects are defined in standard IPM panels.
- The user defined object list is attached to the driver.
- You can manage user defined objects by clicking on the “Manage user defined objects...” button in the rule editor.



Other data panel

Possible actions are:

- Add a new user object.
- Edit the selected user object.
- Delete the selected user object.

A new object can be defined by providing these properties:

- Object name: Unique object user name.
- Object index option ([x]): Activate this option if the object needs to be indexed (e.g. value of type array).
- Object type: Information, Alarm or Measure
- Object unit: Optional unit which is displaying for the object.
- Object group: Name of the group whose object is attached. This group is shown in the “Other data” panel.

Objects with the same group name will be represented in the same group.

9.3.2 Source object name

This feature defines the name of the source object that you need to acquire.

Note: If the destination object name is indexed (for a standard or a user defined object), use “.x” in the source object name for the index position.

If you have set a valid address in the check item of the driver, an interface help you to select the appropriate source object from a list of value.

For that, click on the “Browse source object name...” button. The object list is built automatically when the window is opening.

You can pause at any time the acquisition with the “Pause” button.

The “Restart” button restarts the acquisition from the beginning.

The “Cancel” button aborts the acquisition.

Select the appropriate object in the list and then click on the “OK” button.

For a SNMP device, the source object name corresponds to the OID name of the data to acquire.

The list is built from the device identification name which has been given.

It corresponds to all the OID available under the OID root or the SysOID value.

For a NUT device, the source object name corresponds to the internal NUT object name.

9.3.3 Conversion rule

Several conversion rules are possible:

STRING	<p>Format: <code>STRING([<formatString>])</code></p> <p>Without parameters: No conversion. Just transfers source object value as a string to destination object.</p> <p>With parameter, the destination object is created and its value is fixed. Normalized field can be used:</p> <pre>STRING("My Device") STRING("http://{hostname}/default.html") STRING("{value}")</pre> <p>Fields in bracket are replaced by correspondent value (if defined). Available fields are:</p> <pre>{hostName} {ipAddress} {value} {object:UPS.PowerSummary.iProduct}</pre>
VALUE	<p>Format: <code>VALUE([<constantValue>])</code></p> <p>Without parameters: No conversion. Just transfers object value as a number to destination object.</p> <p>With parameter, the destination object is created and its value is fixed by given value.</p> <pre>VALUE(15) VALUE(-12.34)</pre> <p>We can also use a <i>javascript</i> equation for special needs</p> <pre>VALUE("{value} == -1 ? 0 : {value} + 1")</pre>
MULT	<p>Format: <code>MULT(<multiplier>)</code></p> <p>Multiply source value to the given factor before setting destination object.</p> <pre>MULT(10), MULT(0.1), MULT(3.1415)...</pre>

LINEAR	<p>Format: <code>LINEAR(<srcVal1:dstVal1> , <srcVal2:dstVal2>)</code></p> <p>e.g.: conversion from °C to °F <code>LINEAR(0:32, 100:212)</code></p> <p>Calculation:</p> $(\text{dstVal2} - \text{dstVal1}) / (\text{srcVal2} - \text{srcVal1}) * (\text{value} - \text{srcVal1}) + \text{dstVal1}$
LIST	<p>Format: <code>LIST(<srcVal1:dstVal1>, <srcVal2:dstVal2>, ...)</code></p> <p>Define discrete conversion.</p> <p>If source value is not in the list, destination object is not changed.</p> <p>e.g.:</p> <pre> LIST(0:1, 1:0, 2:1, 3:0) 0 -> 1 1 -> 0 2 -> 1 3 -> 0 4 -> no change ... </pre> <p>Lists can also convert strings to numbers and numbers to strings.</p>
STRFIND	<p>Format: <code>STRFIND(<searchString>, [<trueValue>], [<falseValue>])</code></p> <p>Returns <code><trueValue></code> if <code><searchString></code> was found or <code><falseValue></code> in the other case.</p> <p>If a result value is not defined, the destination is not changed.</p> <p>e.g.::</p> <pre> STRFIND("US",1,2) STRFIND("OL",1) STRFIND("OB",,1) </pre>
BITCHECK	<p>Format: <code>BITCHECK(<bitPos>, [<trueValue>], [<falseValue>])</code></p> <p>Returns <code><trueValue></code> if bit at <code><bitPos></code> is true or <code><falseValue></code> in the other case.</p> <p>If a result value is not defined, the destination is not changed.</p>

The rules are evaluated in the order of the rule list.

Several rules can define the value of a same destination object.

Several rules can use the same source object.

9.3.4 Check result

The “Check” button is used to compute the rule result according the given parameters.

The source result and the final rule result are both displayed.

Note: The button is enabled only if an address or a name is present in the check item of the driver.


10 Storage

10.1.1 Discovery

IPM can supervise storage devices (SNMP service needs to be enabled on storage devices) test has been done with the following storage devices:

Other Devices

This feature, uses the [User Drivers](#) mechanism, you can launch a “range scan” with the IP address of your storage equipment. After this step, you will have a list of storage managed by IPM.

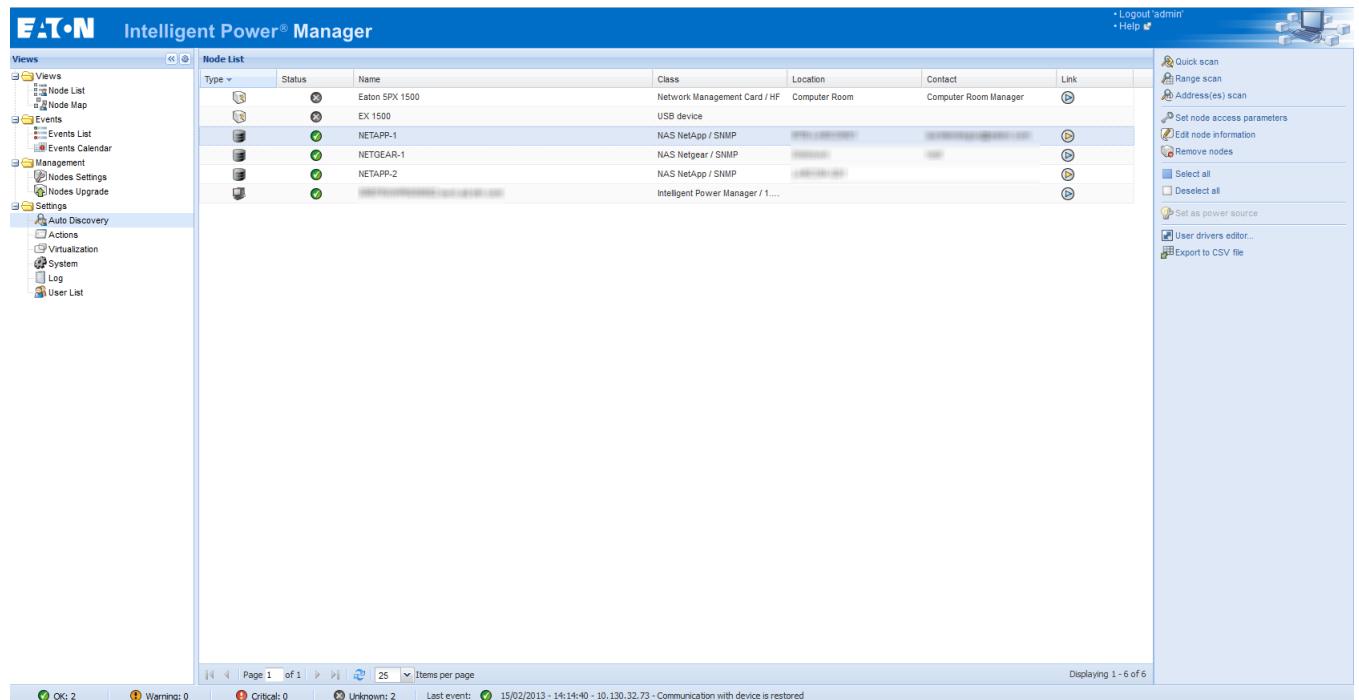

Type	Status	Name	Class	Location	Contact	Link
Network Management Card / HF	OK	Eaton SPX 1500	Network Management Card / HF	Computer Room	Computer Room Manager	Edit
USB device	OK	EX 1500	USB device			Edit
NAS NetApp / SNMP	OK	NETAPP-1	NAS NetApp / SNMP			Edit
NAS Netgear / SNMP	OK	NETGEAR-1	NAS Netgear / SNMP			Edit
NAS NetApp / SNMP	OK	NETAPP-2	NAS NetApp / SNMP			Edit
Intelligent Power Manager / 1....						

On the user interface, storages devices will be seen as a "Storage Appliance" type with following information displayed:

- Type
- Status
- Name
- Description
- Class
- Location
- Contact
- Link

10.1.2 Shut down

IPM can manage the remote shutdown for NETAPP devices. To enable this feature, a specific configuration must be done. Refer to the following document:

http://pqsoftware.eaton.com/install/common/nas_ups_user_doc_aa.pdf


Put the netapp_shutdown.ppk file in the following folder <Eaton install directory>\configs\scripts

Once this configuration is done, you can configure the power source of your storage, and perform the following steps:

- Select your storage
- Double click on your storage node, the "Edit node information" windows opens.
- In the user note, put the following information:
<upsHostName>;<shutdownTimer>;<shutdownDuration>
 - <upsHostName>: The ups hostname attached to storage.
 - <shutdownTimer>: This value is used for the following case, When the ups is on battery (utility lost), This time is taken into account to stop the storage device after the UPS is in battery.
 - <shutdownDuration>: This parameter is the time needed for the storage device to stop gracefully.

Example: ups_1;300;120

When the ups_1 in on battery, the storage (netApp_1) will be shut off 300 seconds after.

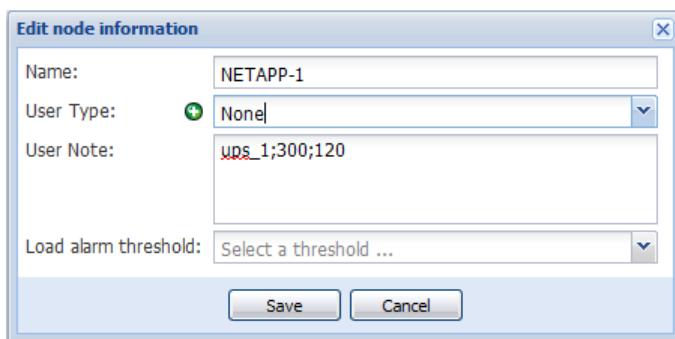

- Activate your user script (<Eaton install directory>\configs\scripts\ netapp_shutdown.js) by setting :
UserScript.enabled: false, to UserScript.enabled: true
- To activate the user trace (print information in the debug console, and in the NetAppShutdown.log file), set UserData.print = false to true.
- Restart the service to take account of the NetApp shutdown feature.



Important note 1:

- The access settings (for the upsHostName) should be correctly set to enable the communication with the storage.



Important note 2:

- IPM manages the shutdown of the NETAPP storage, so it must be the latest to shut down, i.e:

- Than the power source is identical, or different for IPM, and device storage, the IPM's shutdown timer must be greater than the storage's shutdown timer.



Important note 2:

- **The first time where the ssh function is called (to shut down the NETAPP server), an automatic acceptance of public key, is done by IPM.**

11 Automatic data purge

The application stores all data (logs, measures and events) in a database. This database is automatically purged according to the parameters below.

There are two kinds of parameters for the purge:

- maxTime: Maximum timestamp for the oldest records (in ms)
- maxCount: Maximum number of records. It is the oldest records which are removed first.

These parameters can be modified in the *config.js* file in the *logManager/purge* section.

Default settings for purge:

Data of type alarm (see <i>events</i> section)	maxTime: 28 days maxCount: 50000
Data of type measure (see <i>measures</i> section)	maxTime: 7 days maxCount: 200000
Data of type statistic (see <i>stats</i> section)	maxTime: 28 days maxCount: 20000
Log system (see <i>system</i> section)	maxTime: 28 days maxCount: 50000

12 Compatibility List

Eaton has tested the compatibility of Eaton Power Manager with the following devices and applications.

Note: If a Device doesn't support the Quick Scan feature it can be supervised if "Address Scan" or "Range Scan" operations are performed.

12.1 Eaton Devices

Equipment designation	Type	Features	Illustration	Protocols		
				XML	SNMPV1	SNMPV3
Network Management Card Minislot SNMP/Web – Network-MS (ex 66102) And associated Environment Sensor	UPS Option Card Eaton Pulsar	Quick Scan Supervision Management Shutdown				
Network Management Card & Modbus/JBus –Modbus-MS (ex 66103) (through Ethernet Network) And associated Environment Sensor 66846	UPS Option Card Eaton Pulsar	Quick Scan Supervision Management Shutdown				
ConnectUPS- Minislot Network Management Card / Network- MS (ex 103006826)	UPS Option Card Eaton Powerware	Quick Scan Supervision Management Shutdown				
ConnectUPS-BD Web /SNMP	UPS Option Card Eaton Powerware	Quick Scan Supervision Shutdown (**)				
ConnectUPS-XSlot Web /SNMP/xHubCard (*)	UPS Option Card Eaton Powerware	Quick Scan Supervision Shutdown (**)				

PXGX2000 (*)	UPS Option Card Eaton Powerware	Quick Scan Supervision Shutdown (**)	 X  
PXGX-UPS Card	UPS Option Card Eaton	Quick Scan Supervision Shutdown	X  
Eaton Advanced ePDU (Europe = Switched (SW), Advanced Monitored (AM) and Managed (MA) / US= Advanced Monitored (AM) and Managed (MA))	ePDU Integrated Communication Card	Quick Scan (v 1.20) Supervision (v1.20) Management (v 1.25)	   
Eaton ePDU Monitored & Advanced Monitored	PDU Integrated Communication Card	Supervision	   
Eaton ePDU Managed	PDU Integrated Communication Card	Supervision	   
Eaton ePDU Switched	PDU Integrated Communication Card	Supervision	   
MGE Switched PDU NM - 68130 / 68134/56132/56134/56136/56138 MGE AmpMeter PDU NM - 68152/ 56134/56144	PDU Integrated Communication Card	Supervision	 X  
Computers (Windows - Linux) hosting the IPP Shutdown Controller	UPS Proxy (Shutdown Controller)	Quick Scan Supervision Management Shutdown	   
MGE Network Management Proxy(Windows) XML-Agent	UPS Proxy (legacy)	Supervision	   
Computers (Windows) hosting the application LanSafe Web View	UPS Proxy (legacy)	Supervision	   
MGE Network Management Card MiniSlot SNMP/Web – 66244 And associated Environment Sensor	UPS Option Card (legacy)	Supervision	   

Network Management Card Transverse SNMP/Web – 66074 And associated Environment Sensor	UPS Option Card (Legacy)	Supervision		✓	✗	✗
Aphel 1	ePDU Integrated Communication Card	Supervision		✗	✓	✓
Aphel 2	ePDU Integrated Communication Card	Supervision		✗	✓	✗

(*)With Intelligent Power Manager 1.10, the Eaton Powerware 3 phase UPSs compatibility is officially available according to the following solution:

- **Cards:** ConnectUPS-X v4.3x or PXGX2000 v1.2x
- **UPSs:** Blade UPS, PW9155 Dual Phase, PW9355 10-30 kVA, PW9390 40-160kVA, PW9395 225-1100kVA & SBM
- **Known limitation:** PW9315 is not supported.

12.2 Applications on Computers

Applications designation	Features	
Computers (Windows/Linux) hosting the application Intelligent Power Protector	Quick Scan Supervision Management	
Computers (Windows/Linux/Mac) hosting the application Network Shutdown Module V3.xx	Quick Scan Supervision Management	

12.3 Eaton Serial line Devices

Eaton Equipment designation	Connectivity
Eaton Powerware series: 3105, 5110, 5115, 5130, 9130, 9135, 9140 and legacy 9120, 9125	USB or RS232
Eaton Powerware series: BladeUPS, 5125, 9155, 9355, 9390, 9395	RS232 only
Eaton Pulsar Series: Evolution 650 / 850 / 1150 / S 1250 / 1550 / S 1750 / 2000 / S 2500 / S 3000 Pulsar 700 / 1000 / 1500 / 1000 RT2U / 1500 RT2U (intl. & US Models) Pulsar M / EX Eaton 5P, 5PX Pulsar MX & Pulsar MX Frame 16 U / MX Eaton 9PX	USB or RS232
Eaton Pulsar Series: EX RT Comet EX RT 1:1 / 3:1 / EX 5 RT (Asia/Pacific)	RS232 only

Notes:

- XSlot-USB Module for Powerware series is unsupported by Intelligent Power® Manager 1.12
- Ellipse ASR 600/750/1000/1500 USBS, Ellipse MAX, Protection Station, Protection Center, NOVA AVR, are currently supported by Personal Solution Pac software.

12.4 Other Devices

Equipment designation	Card/ proxy	Features	
HP UPS Network Module Minislot (AF465A)	Network Card	Quick Scan Supervision	
Dell Network UPS Card (H910P)	Network Card	Quick Scan Supervision	
IBM UPS Network Management Card (46M4110)	Network Card	Quick Scan Supervision	
APC UPSs	APC Network Management Card	Supervision	
All IETF MIB enabled UPSs (RFC1628) e.g. Liebert, ...		Supervision	STANDARD IETF UPS MIB 1.3.6.1.2.1.33.xx
PowerDsine series 6000	Card		
Servertech sentry models	PDU Integrated Communication Card		
Storage	Generic Driver		
	<ul style="list-style-type: none"> NETAPP (FAS2040 Series, i.e: FAS 2040) HP (X1400 G2 Network Storage) SYNOLOGY (RS812+) NETGEAR (ReadyNas 2100) QNAP (TS-559) BUFFALO (LinkStation, TeraStation) 		
NUT enabled devices	Generic Driver		

13 Performances

To provide a performance evaluation Eaton has tested the following two configurations:

Test with Machine 1 (server Dell PowerEdge 2900)

- CPU: Intel Xeon 5130 Dual Core @2GHz
- Memory: 2Go DDR2 @666MHz
- HDD: 2 HDDs 67GB 7200 rpm RAID 0 (Mirroring)
- OS: Windows Server 2008 64 bits

Test conditions during 40 hours:

- 1300 nodes (including ~50 real), mainly IPMs, and some NSM and NMC.
- Average CPU load: 20-30%
- Memory load: 200~300MB

Test with Machine 2 (typical PC)

- CPU : Intel Core2 Duo 6600 @2.4GHz
- Memory: 2Go DDR2
- HDD: 1 HDD 220 GB 7200 rpm
- OS : Windows Vista Enterprise 32 bits

Test conditions during 40 hours:

- 1000 nodes (including ~50 real), mainly IPMs, and some NSM and NMC.
- Average CPU load: ~ 60%
- Memory load: 200~300MB

Note that these tests have been performed on Windows server Operating System. The Windows 2003 or 2008 Operating Systems don't have the limitation of 10 simultaneous connections.

13.1 Network Ports

Here is the list of Network ports used by IPM and IPP:

Protocol	Mode/Port	NMC	PXGX2000 PXGX-UPS Connect UPS BD Connect UPS XSlot	IPP with Shutdown controller	IPP	IPM
SMTP	TCP/25	OUT	OUT	OUT	OUT	OUT
DHCP/BOOTP	UDP/67	OUT	OUT	x	x	x
TFTP	UDP/69	IN	x	OUT	OUT	OUT
HTTP	TCP/80	IN	IN	OUT	OUT	OUT
NTP	UDP/123	OUT	OUT	x	x	x
SNMP	UDP/161	IN	IN	OUT	OUT	OUT
SNMP Traps	UDP/162	OUT	OUT	x	x	x
UNMP	UDP/200	x	OUT	IN/OUT	IN/OUT	IN/OUT
HTTPS	TCP/443	IN	IN	OUT	OUT	OUT
EATON Supervision	TCP/4679	x	x	IN/OUT	IN/OUT	IN/OUT
EATON Notification Broadcast	UDP/4679	IN/OUT	x	IN/OUT	IN/OUT	IN/OUT
EATON SSL Supervision	TCP/4680	x	x	IN/OUT	IN/OUT	IN/OUT
EATON Alarms Broadcast	UDP/4680	OUT	x	IN	IN	IN
EATON Connected Alarms	TCP/5000	IN	x	OUT	OUT	OUT
EATON Connected Alarms	TCP/5001	x	x	IN	OUT	OUT

14 FAQ and Error messages

In the HTML pages

Cannot display the UPS properties page. HTTP 404 error with IE.

Solution: Check the URL entered.

- <https://<name or IP of the computer hosting IPM>:4680/>

or

- <http://<name or IP of the computer hosting IPM>:4679/>

15 Glossary

IP address

When TCP/IP is installed on a computer, an address is assigned to the system. Each address is unique and is made up of four numbers, each between 0 and 256 (e.g. 168.8.156.210).

Network Management Proxy

Network Management Proxy is used to control a UPS and connect it to the TCP/IP network.

NMS (Network Management System)

The NMS supervises SNMP devices connected to the TCP-IP Network.

Network Shutdown Module

The Network Shutdown Module is a software module that uses the information transmitted by the Network Management Card/Proxy to inform computer users on the current status of the electrical power supplied to the computer.

If the supply of the electrical power from the UPS is at risk, the Network Shutdown Module initiates an orderly shutdown of the computer under the most secure conditions possible.

SSL (Secure Socket Layer, created by Netscape):

A solution for securing transactions over the internet. SSL is a communication protocol that authenticates the data exchanged, as well as ensuring its confidentiality and integrity. The protocol uses a recognized encryption method, the **RSA algorithm with a public key** (where RSA means Rivest, Shamir and Adleman, the inventors). An RSA key is the result of operations involving prime numbers. SSL is built into the Internet browsers on the market. The padlock in the bottom of your browser screen is automatically displayed if the server sending information uses SSL.

TCP/IP (Transmission Control Protocol / Internet Protocol):

Family of protocols for the transport and network layers.

16 Acknowledgements

Huge thanks from the Eaton software development team to the following projects:

Spider Monkey

Ext JS

SQLite

- The SQLite Project <http://www.sqlite.org/>.
- Their generous donation of the source code to the public domain helped us for this project.

Open SSL

- This IPM product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)
- This IPP product includes cryptographic software written by Eric Young (eay@cryptsoft.com)
- This IPP product includes software written by Tim Hudson (tjh@cryptsoft.com)

Lib USB

Net SNMP

PuTTY executables

The full License version for each of these projects is available from **Settings ▶ System ▶ About**

17 Appendixes

17.1 Appendix 1: Configuring the IPM vCenter Plug-in

17.1.1 Introduction

VMware's vCenter Server platform forms the foundation for virtualization management. It provides management of hosts and Virtual machines from a single console. To further unlock the power of VMware's management system, VMware has provided a facility to extend the functionality of VMware vCenter.

Various useful applications can be attached to vCenter to make it more useful. **Eaton vCenter Plug-in also called “vCenter Intelligent Power Manager Plug-in”** is a very easy to use and deploy Plug-in to manage IPM from vCenter. This plug-in provides the possibility to integrate Intelligent Power Manager (IPM) with vCenter environment. Once the plug-in is registered, a tab in vCenter will open IPM and allow users to configure and manage IPM from vCenter environment.


The VMware plug-in allow also the creation of new type of events that can be trig type of alarms.

17.1.2 Checking that IPM Plug-in is registered in vCenter

In the vSphere Client, click on Plug-ins ▶ Manage Plug-in ...



Intelligent Power Plug-in vCenter can be seen in the Plug-in Manager

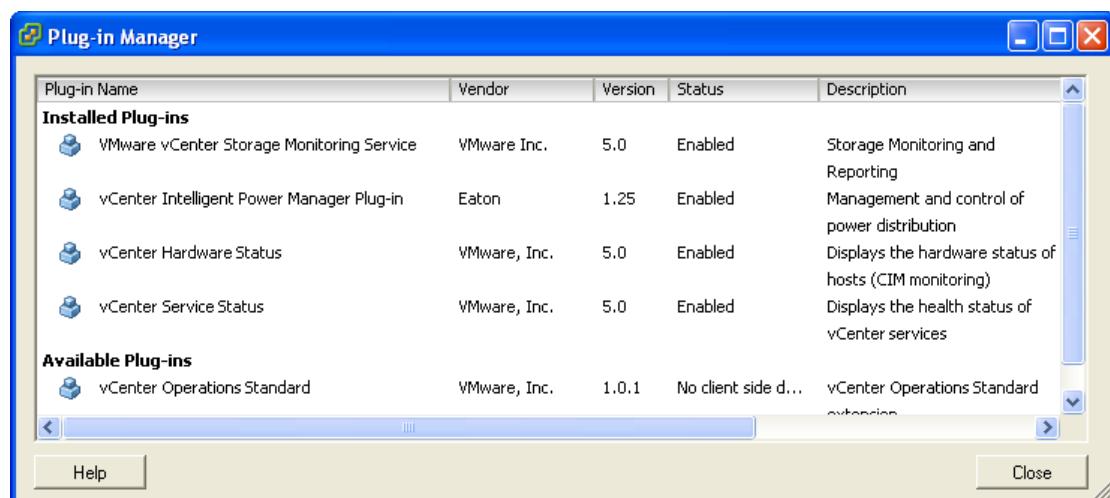

17.1.3 Events and Alarms

Once the “vCenter Intelligent Power Manager Plug-in” is registered, IPM creates a new alarm “**Host UPS PowerFailure (On Battery)**” that is triggered from power event.

 Host UPS PowerFailure (On Battery)  This object Alarm that triggers if host is on Power Failure (Power Events sended by Intelligent Power Manager)

17.1.4 Using IPM through vCenter

The “Eaton Power Manager” tab will now be visible in the vCenter Server Console and in the root folder . IPM is now available and is fully functional with the vSphere Client. To learn more about the features and usage of IPM, please consult the IPM User Manual. The IPM screen is shown below, note the “Eaton Power Manager” tab on the top is selected.



The screenshot shows the vCenter Server Console interface. The top navigation bar includes tabs for Getting Started, Datacenters, Virtual Machines, Hosts, Tasks & Events, Alarms, Permissions, Maps, and Eaton Power Manager. The Eaton Power Manager tab is selected, indicated by a blue background. Below the navigation bar, the title "EATON Intelligent Power Manager" is displayed. The main content area contains a section titled "What is Eaton Intelligent Power Manager?" followed by a bulleted list of features. To the right, there is a login form with fields for "Login" and "Password" and a "Login" button. A small icon of a laptop and network cables is positioned above the login form.

- Ideal for monitoring and managing multiple power and environmental devices, Intelligent Power Manager software from Eaton delivers a global view across the network from any PC with an Internet browser.
- Exceptionally versatile, the software is compatible with any device supporting a network interface, including other manufacturers' UPSs, environmental sensors, ePDUs, shutdown applications and more.
- Intelligent Power Manager also offers the ability to organize a management table by groups, centralize alarms, and maintain event logs for preventive maintenance of the entire installed equipment base.

17.2 Appendix 2: Configuring the XenCenter Plug-in

17.2.1 Prerequisites

The only prerequisite is to have IPM installed on the same machine as XenCenter.


17.2.2 Check XenCenter Plug-in Installation

In the virtualization panel, you have to check the box “XenCenter Plugin” to install XenCenter Plug-in.




You will see the Plugin in XenCenter => Tools => Plugins. (see below)

If not, please Scan the Plug-in directory.

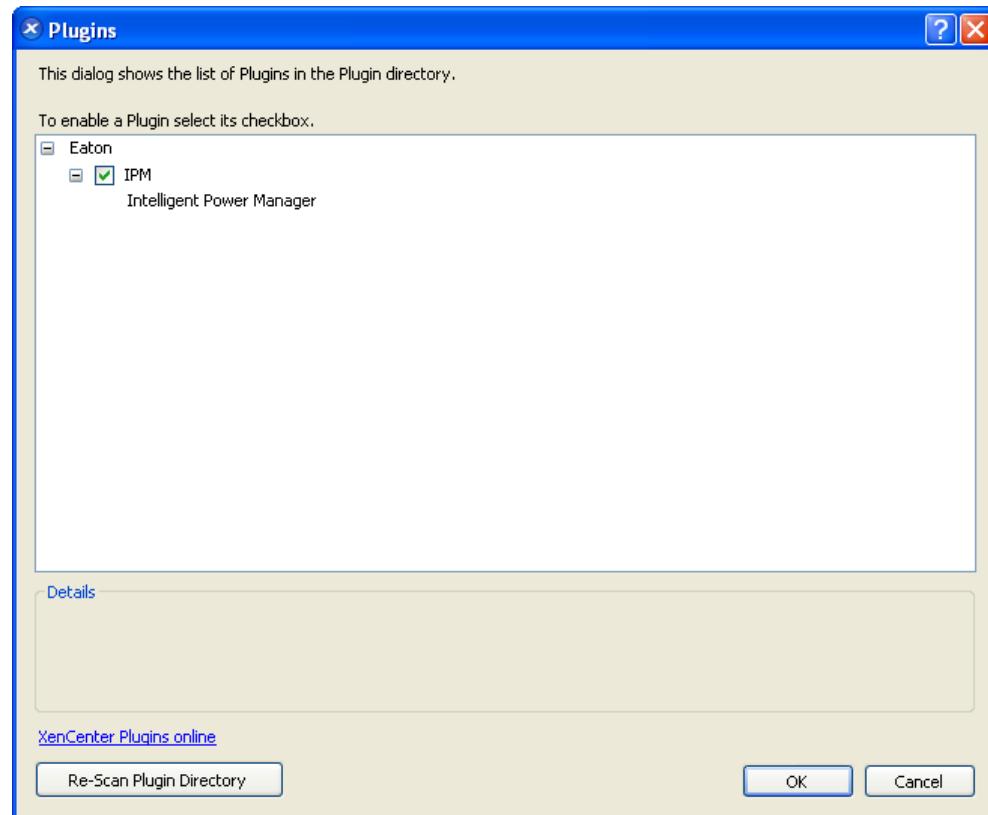

17.2.3 Using IPM through XenCenter

Once the Plug-in is installed, you can see on the XenCenter level a tab named "**Intelligent Power Manager**"

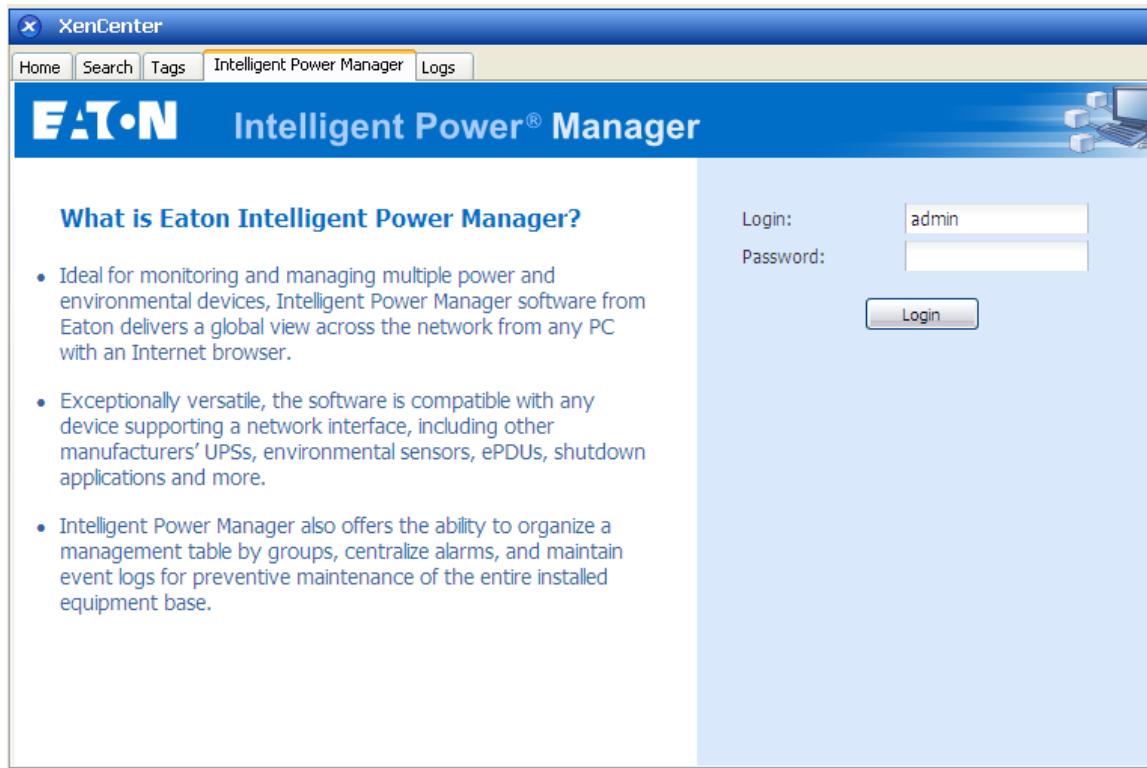

The screenshot shows a web-based login interface for the Eaton Intelligent Power Manager. The top navigation bar includes links for Home, Search, Tags, Intelligent Power Manager (which is highlighted in orange), and Logs. The main header features the Eaton logo and the text "Intelligent Power® Manager". On the right side, there is a login form with fields for "Login" (containing "admin") and "Password", and a "Login" button. To the right of the login form is a small graphic of a computer monitor and server racks. The left side of the interface contains a section titled "What is Eaton Intelligent Power Manager?" with a bulleted list of features.

What is Eaton Intelligent Power Manager?

- Ideal for monitoring and managing multiple power and environmental devices, Intelligent Power Manager software from Eaton delivers a global view across the network from any PC with an Internet browser.
- Exceptionally versatile, the software is compatible with any device supporting a network interface, including other manufacturers' UPSs, environmental sensors, ePDUs, shutdown applications and more.
- Intelligent Power Manager also offers the ability to organize a management table by groups, centralize alarms, and maintain event logs for preventive maintenance of the entire installed equipment base.

17.3 Appendix 3: Configuring Maintenance mode and vMotion with vCenter

17.3.1 Prerequisites

All Virtual Machine images have to be installed and configured on a file server. (Please refer to VMware user documentation listed in [Appendix VMware references](#))

17.3.2 Introduction

The Dynamic Resource Scheduler (DRS) application from VMware is used to provide load balancing within the IT network. In particular, DRS is used to ensure the right resource capacity is available for the data center load. A second application called vMotion in conjunction with DRS will enact movement of Virtual machines from physical server to physical server in order to provide the best load balance.

The DPM application (Distributed Power Manager) will help maximize data center electrical power efficiency by checking DRS for physical server utilization then using vMotion, will move Virtual machines to servers in order to fully unload servers than idle them or power them down for maximum power savings.

Eaton uses the same vMotion capability when a UPS is in a critical power situation to move virtual machines off of a server that has a critical power situation. Intelligent Power Manager will now write alarms/alerts into vCenter, which, in turn, will trigger vMotion.

VMware uses the term 'setting a server into Maintenance mode' to trigger the vMotion. It is called this because before performing maintenance on server, the data center manager needs to clear the Virtual Machines from the server.

17.3.3 Concept of Maintenance Mode

Both standalone hosts, and hosts within a cluster, support the maintenance mode. Only ESX/ESXi Server 3.0 and later supports maintenance mode for standalone hosts.

A host enters or leaves maintenance mode only as the result of a user request. If the host is in a cluster when it enters maintenance mode, the user is given the option to evacuate powered-off virtual machines. If this option is selected, each powered-off virtual machine is migrated to another host, unless there is no compatible host available for the virtual machine in the cluster. While in maintenance mode, the host does not allow deployment or 'power-on' of a virtual machine. Virtual machines that are running on a host entering maintenance mode need to be either migrated to another host or shut down (either manually or automatically by DRS).

When no more running virtual machines are on the host, the host's icon changes to include 'under maintenance' designation and the host's Summary panel indicates the new state. The default automation mode of a virtual machine determines its behavior when the host (in a DRS cluster) it is running on enters maintenance mode:

- Any fully automated virtual machine is migrated automatically.
- For a partially automated or manual virtual machine, a recommendation for further user action is generated and displayed.

17.3.4 Configuring maintenance mode behavior in vCenter

To configure the maintenance mode feature behavior, we provide here a simple configuration example:

Enable the DRS in “Fully Automated” automation level with following steps:

- Open the vCenter server in a vSphere client.
- Right click on your Cluster > Edit Setting > Turn on VMware DRS. Click on next with all default values and finish.

Notes:

- With this example you choose to migrate all the virtual machines from this server to another server of the same cluster.
- You have the possibility to define other behaviors according to your needs

17.3.5 Configuration Test


To test the installation, please perform a power failure on the UPS and check on vSphere client that the corresponding ESX/ESXi host enters in Maintenance mode after the “Maintenance mode timer”.

17.4 Appendix 4: VMware vCenter HA (High Availability)

Once the HA Cluster feature is enabled, VMware disables the automatic startup and shutdown functionality when a Hypervisor is shutdown.

IPM features for HA mode:

- IPM will continue to move the VM from one server to the others, if the all the servers are powered by different UPSs with different power source. (as illustrated on below picture)

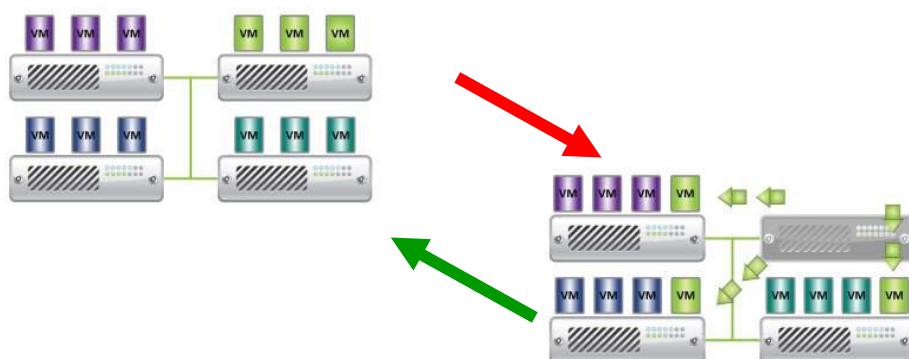

- IPM continues to protect the Hypervisor also when power fails.
- Due to the deactivation of the automatic startup and shutdown, at the end of Utility failure sequence, all the virtual machine will “Power Off”.
=> To prevent this VM “Power off”, you have two solutions:

- Configure the VMware ESX/ESXi nodes in IPM to shutdown the VMs (Remote Shutdown of the Virtual Machines Setting) **(Recommended solution)**
- Install an IPP on each VM **(This is not an optimized solution)**.
You have to take care that when VMs move, the IPP still links to the same UPS power source.

Table configuration/behavior:

Case	Remote Shutdown	Type of the Virtual Machines	HA in vCenter	What happens to VMs	What happens to Hypervisor	Comments
1	Enabled	Enabled	Enabled	Shutdown	Shutdown	Valid configuration
2	Enabled	Enabled	Disabled	Shutdown	Shutdown	Valid configuration (anyway, more reliable to let VMware shutdown its own VMs)
3	Enabled	Disabled	Enabled	Crash	Shutdown	Hypervisor will shutdown without the VMs
4	Enabled	Disabled	Disabled	Crash/ Shutdown	Shutdown	Depending if the Startup/shutdown of the virtual machines is configured
5	Disabled	Enabled	Enabled	Crash	Crash	IPM do nothing
6	Disabled	Enabled	Disabled	Crash	Crash	IPM do nothing
7	Disabled	Disabled	Enabled	Crash	Crash	IPM do nothing
8	Disabled	Disabled	Disabled	Crash	Crash	IPM do nothing

Reference:

- You can see on the link below the VMware note about the deactivation of the Automatic Startup/Shutdown when creating a VMware HA Cluster.

[Creating a vSphere HA Cluster](#)

17.5 Appendix 5: Configuring Maintenance mode and LiveMigration with SCVMM

17.5.1 Maintenance Mode

In Virtual Machine Manager (VMM) 2008 R2, you can start *maintenance mode* for a virtual machine host anytime that you need to perform maintenance tasks on the physical host, such as applying security updates or replacing hardware on the physical host computer.

When you start maintenance mode on a Windows-based host, VMM automatically does the following:

- On a stand-alone host, places all running virtual machines into a saved state.
- On a Windows-based host cluster that is capable of live migration, gives you the option to do one of the following:
 - Live migrate all running highly available virtual machines to other hosts in the cluster, and place any running virtual machines that are not highly available in a saved state.
 - Place all running virtual machines into a saved state.

(Please refer to Microsoft user documentation listed in [Appendix Microsoft references](#))

17.5.2 What is Live Migration

Live migration is a Hyper-V feature in Windows Server 2008 R2, which requires the failover clustering feature to be added and configured on the servers running Hyper-V. Live migration allows you to transparently move running virtual machines from one node of the failover cluster to another node in the same cluster without a dropped network connection or perceived downtime. In addition, failover clustering requires shared storage for the cluster nodes. This can include an iSCSI or Fiber-Channel Storage Area Network (SAN). All virtual machines are stored in the shared storage area, and the running virtual machine state is managed by one of the nodes. (Please refer to Microsoft user documentation listed in [Appendix Microsoft references](#))

17.5.3 Configuration Test

To test the installation, please perform a power failure on the UPS and check on SCVMM console that the corresponding Hyper-V host enters in Maintenance mode after the “Maintenance mode timer”.

Hyper-V machines have to be started before the machine that is hosting the SCVMM.

SCVMM service needs some time to refresh its status. If the starting sequence is not correct, the Hyper-V will stay in Maintenance mode

17.6 Appendix 6 VMware references

17.6.1 Eaton and Virtualization

Please visit <http://www.eaton.com/virtualization>

17.6.2 VMware ESX configuration

Please visit <http://www.vmware.com/support/>

17.6.3 vCenter Server (VMware Supervisor)

Please visit <http://www.vmware.com/products/vcenter/> for more information about download and installation of vCenter Server

Please visit also <http://www.vmware.com/products/drs/> for more information about Distributed Resource Scheduler

17.6.4 vSphere SDK for Perl

Please visit <http://www.vmware.com/support/developer/viperltoolkit/> for more information about download and installation of vSphere SDK for Perl.

17.7 Appendix 7 Microsoft Hyper-V references

17.7.1 Eaton and Virtualization

Please visit <http://www.eaton.com/virtualization>

17.7.2 Microsoft TechNet Library

See the Microsoft TechNet Library for more information

<http://technet.microsoft.com/en-us/library/default.aspx>

17.7.3 About Maintenance Mode

<http://technet.microsoft.com/en-us/library/ee236481.aspx>

17.7.4 Requirements for using live migration

See the link below about “Hyper-V Live Migration FAQ”

<http://technet.microsoft.com/en-us/library/ff715313%28WS.10%29.aspx>

17.8 Appendix IPP user guide

http://pqsoftware.eaton.com/install/win32/ipp/eaton_ipp_users_guide_en_1.30.pdf

17.9 VMware Icons and Diagrams

This document was created using the official VMware icon and diagram library. Copyright © 2012 VMware, Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. VMware products are covered by one or more patents listed at <http://www.vmware.com/go/patents>.

VMware does not endorse or make any representations about third party information included in this document, nor does the inclusion of any VMware icon or diagram in this document imply such an endorsement.